

MAGNAVOX

AMAZON ALEXA VOICE ACTIVATED WIFI SPEAKER

with Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MSH315V

Size: 148.5(W) x 210(H)mm (A5)

IMPORTANT SAFETY INSTRUCTIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

CAUTION:
THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.
TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.
USE CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTICE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

For example, this unit may not have the capability to be connected to an outdoor antenna.

1) **Read these instructions.**

All the safety and operating instructions should be read before the product is operated.

2) **Keep these instructions.**

The safety and operating instructions should be retained for future reference.

3) **Heed all warnings.**

All warnings on the product and in the operating instructions should be adhered to.

4) **Follow all instructions.**

All operating and use instructions should be followed.

5) **Do not use this apparatus near water.**

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) **Clean only with dry cloth.**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**

9) **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**

10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**

11) **Only use attachments/accessories specified by the manufacturer.**

12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

An appliance and cart combination should be moved with care.

Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.



Portable Cart Warning

13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**

15) **Power source**

This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) **Power lines**

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

IMPORTANT SAFETY INSTRUCTIONS

17) Overloading


Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

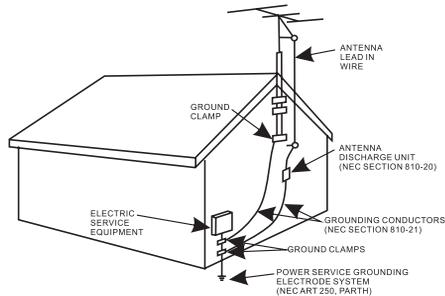

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operational condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore in the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance—this indicates a need for service.

25) Note to CATV system installer


This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.


LOCATION OF CONTROLS

Main Unit:

Top View

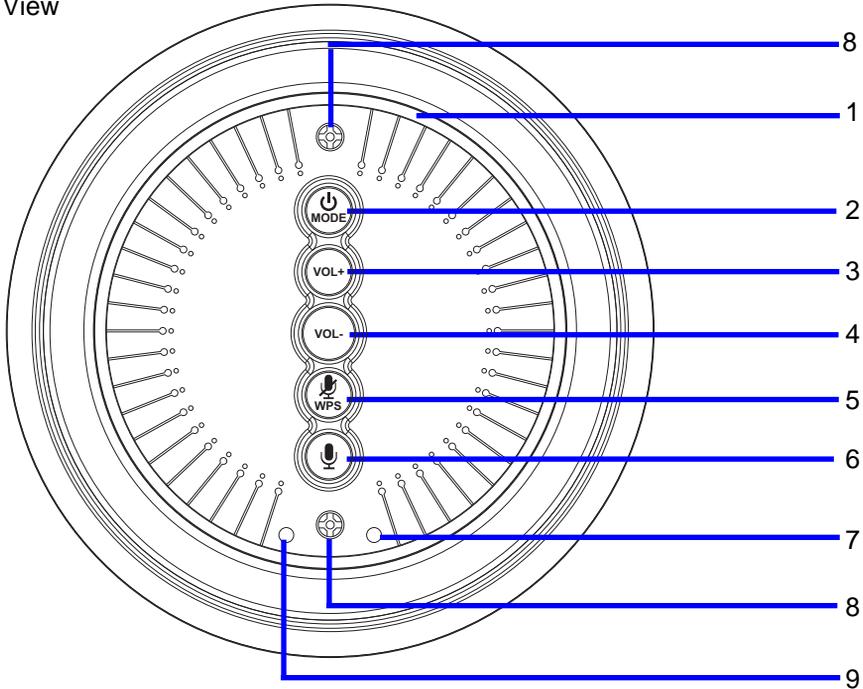

Rear View

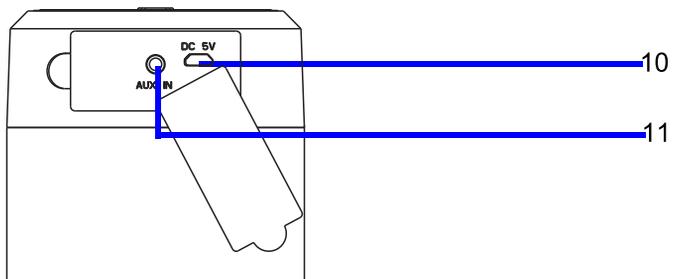


1. Decorative Ring with LED Lights
2. ⏻ /MODE Button
3. VOL (Volume) + Button
4. VOL (Volume) - Button
5. 🎤 /WPS (Microphone Off/Wi-Fi Protected Setup) Button
6. 🎤 (Microphone On) Button

7. Indicator
8. Built-in Microphone
9. Charge Indicator
10. DC 5V (In) Jack (Micro USB Port)
11. AUX IN Jack


LOCATION OF CONTROLS

Bottom View

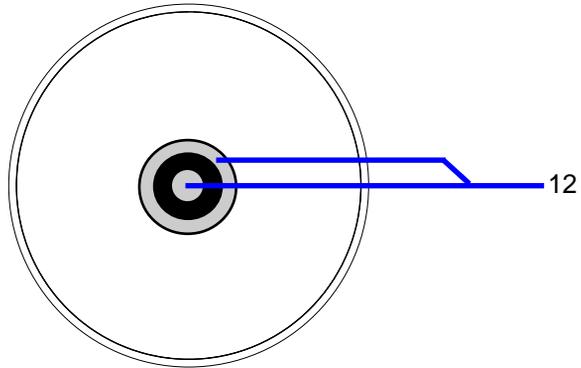


Charging Station:

Top View

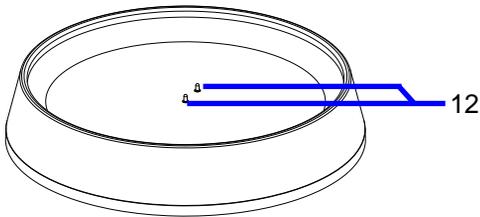

Rear View

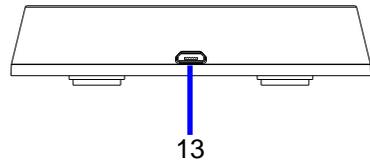

12. Charging Contacts


13. DC 5V (In) Jack (Micro USB Port)

POWER SOURCE


The unit has a built-in Li-ion rechargeable battery, charge it before use or when it is drained as below:

Charging Through the Unit Directly:

1. Open the rubber cover on the rear of unit as illustrated below:

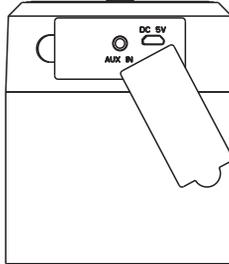

2. Connect the Micro USB Plug from the supplied AC/USB Adaptor to the DC 5V (In) Jack (Micro USB Port).
3. Plug the AC/USB Adaptor to the AC wall outlet having AC 100-240V~, 50/60Hz as illustrated below:

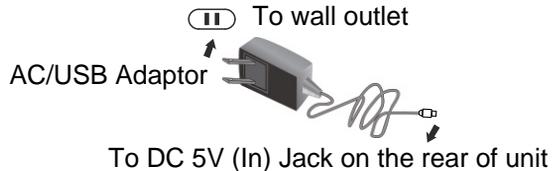


4. While charging, the Red Charging Indicator on the top of unit will illuminate. When finished charging, it will turn off.

Charging Through the Charging Station:

1. Connect the Micro USB Plug from the supplied AC/USB Adaptor to the DC 5V (In) Jack (Micro USB Port) on the Charging Station.
2. Plug the AC/USB Adaptor to the AC wall outlet having AC 100-240V~, 50/60Hz.

3. Place the unit to the Charging Station as illustrated below:

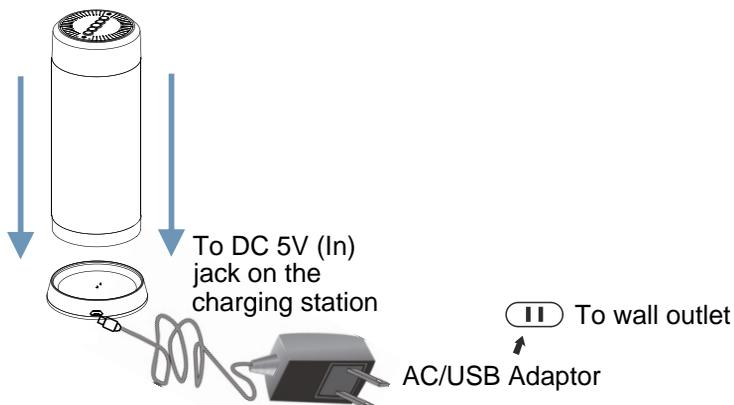

4. While charging, the Red Charging Indicator on the top of unit will illuminate. When finished charging, it will turn off.

Notes:

1. Clean the Charging Contacts on the bottom of unit and top of Charging Station prior to charging unit.
2. While charging, you can operate the unit as usual.
3. If left unused for a long period of time, unplug the Adapter from wall outlet.
4. Your battery will last longer if you follow these simple guidelines for caring and storing:
 - A. Before first time use, charge it approximately 4 hours until the unit is fully charged.
 - B. Recharge and store the unit within the temperature range of 5°C~35°C (40°F~95°F).
 - C. Do not charge longer than 24 hours. Excessive charging or running the unit until the battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
 - D. Battery life naturally shortens slowly over time.
 - E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION

BT MODE

BT (Bluetooth pairing) and play:

First time use or re-pairing the unit to a new BT Device, pair as below:

1. Power on the unit by pressing and holding the  /MODE Button on the top of unit approximately 2 seconds until the Blue and Green Indicators on the top of unit is illuminate and blink.
2. Wait approximately 25 seconds until the Blue Indicator is not on. (Only the Green Indicator will illuminate and blink).
3. Press the  /MODE Button repeatedly until Blue Indicator begins to blink, this will access BT Mode.

Note: If the unit is already added into the Wi-Fi network. Then:

- Power on the unit and wait approximately 25 seconds as previously instructed. The unit will automatically connect to the Wi-Fi network.
 - The Blue Indicator will turn off and the Green Indicator/Decorative Ring will illuminate and stop blinking.
 - Press the  /MODE Button repeatedly until the Blue Indicator begins to blink, this will access BT Mode.
4. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the Blue Indicator will stop blinking.
 5. If pairing is complete you may now play music with your external BT Device.
 6. During playback:
 - Press the VOL + or – Buttons on the top of unit to adjust the volume level as desired.
 - Using the controls on the paired BT Device to pause, skip tracks as usual.
 7. To shut off the unit, press and hold the  /MODE Button approximately 1 second then release the button.

Notes:

- When the external BT Device searches for the unit, our model number "MSH315V" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

1. Power on the external BT Device and enter to BT mode.
2. Press and hold the /MODE Button on the top of unit to power on. The Blue and Green Indicators on the top of unit will illuminate and blink.
3. Wait approximately 25 seconds until the Blue Indicator is not lit. (Only the Green Indicator will illuminate and blink).
4. Press the /MODE Button repeatedly until Blue Indicator begins to blink, this will access BT Mode.


Note: If the unit is already added into the Wi-Fi network. Then:

- After powering on the unit and waiting approximately 25 seconds as previously instructed. The unit will automatically connect to the Wi-Fi network.
 - The Blue Indicator will turn off and the Green Indicator/Decorative Ring will illuminate and stop blinking.
 - Press the /MODE Button repeatedly until the Blue Indicator begins to blink, this will access BT Mode.
5. Wait approximately 12 seconds more until the unit is auto paired to the external BT Device. (The Blue Indicator will stop blinking)
 6. After pairing is complete you may now play music with your external BT Device.

AUX IN MODE

To listen from an external Audio Player such as a MP3 Player, Discman ...etc.

1. Connect one end of the supplied Audio Connection Cable to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Open the Rubber Cover, connect the other end of the cable to the AUX IN Jack as illustrated below:

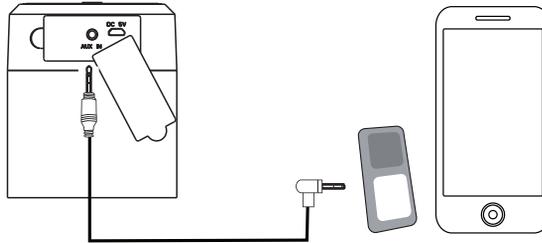

3. Power on the unit by pressing and holding the **⏻** /MODE Button on the top of unit approximately 2 seconds until the Blue and Green Indicators on the top of unit illuminates and blinks.
4. Wait approximately 25 seconds until the Blue Indicator is not lit. (Only the Green Indicator will illuminate and blink).
5. Press the **⏻**/MODE Button repeatedly until the Green and Blue Indicators are illuminated and stop blinking.

Note: If the unit is already added into the Wi-Fi network. Then:

- After powering on the unit and waiting approximately 25 seconds as previously instructions. The unit will automatically connect to the Wi-Fi network.
 - The Blue Indicator will turn off and the Green Indicator/Decorative Ring will illuminate and stop blinking.
 - Press the **⏻**/MODE Button repeatedly until the Green and Blue Indicators are illuminated to switch to AUX (In) mode.
6. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to a high level.)
 7. During playback:
 - Press the VOL + or – Buttons on the top of unit to adjust the volume level as desired.
 - Using the control button on the connected Audio Player to pause, skip tracks as usual.

WIFI MODE

Apps Installation:

Before connecting the unit into the Wi-Fi network, download and install the " MAGNAVOX Alexa Player (By CRAIG) " Apps from the Apps store in your Mobile Device. The icon on right will appear on your device after installation.



Notes:

- Download it from Apple Apps store for IOS devices.
- Download it from Google Play store for Android devices.

Connect the unit to Wi-Fi network via your Mobile Device:

Connect the unit into the Wi-Fi network before using Wi-Fi functions as explained below:

(The setting procedures for different phones will differ depending on operating systems. Please follow the on screen instructions on the mobile device to complete the settings.)


1. Power on the unit by pressing and holding the  /MODE Button on the top of unit approximately 2 seconds until the Blue and Green Indicators on the top of unit illuminate and blink.
2. Wait approximately 25 seconds until the Blue Indicator is not lit. (Only the Green Indicator will illuminate and blink).
3. Power on your Mobile Device and turn on the preloaded Apps "MAGNAVOX Alexa Player (By CRAIG)". The following picture will appear on the Mobile Device's screen:



4. Wait until the following page appears. Then connect your unit into the Wi-Fi network as instructed below following on-screen prompts:
Touch/tap the "Wi-Fi Setup Wizard" Button on the screen.




5. The following page will appear, then touch/tap the "Next" Button on the screen.

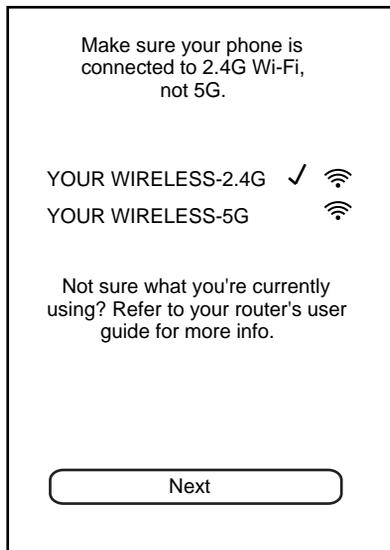


NOTE:

Make sure your Mobile Device is connected into the same 2.4G Wi-Fi network. Otherwise, reset the Wi-Fi setting of your Mobile Device to the 2.4G Wi-Fi network.


6. The following page will appear. Enter the password then touch/tap the "Next" Button on the screen.

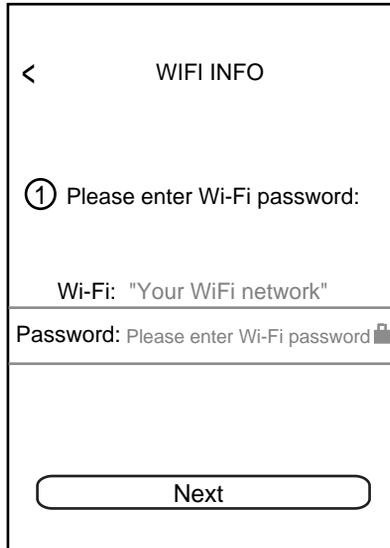


7. The following page will appear. Press and hold the /WPS Button on the top of unit until audible prompt "Connecting to your network, this may take one to three minutes" is heard. Then touch/tap the "Next" Button to start connection.

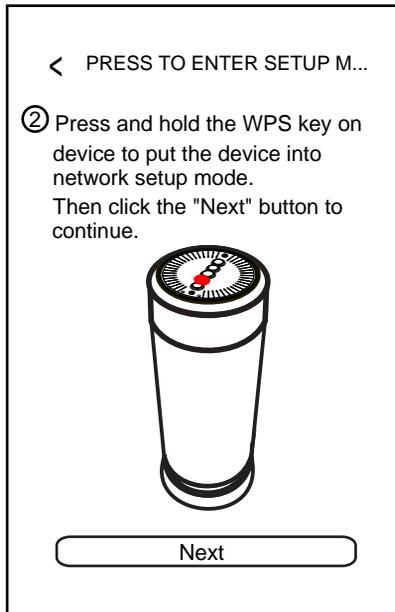

8. While connecting, the following page will appear.

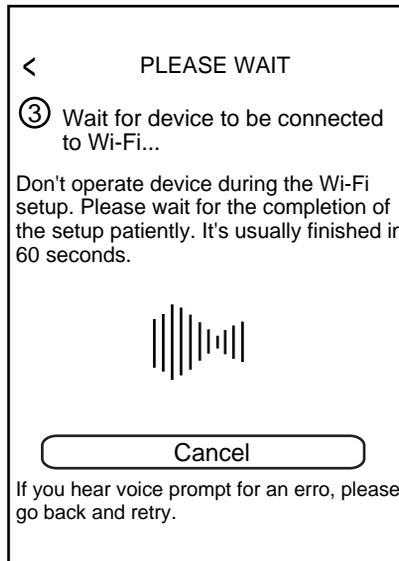


9. Wait a few seconds, the unit will connect to Wi-Fi network and the audible prompt "Connected" will be heard. The following page will appear. Touch/tap the "Next" Button to save and exit.

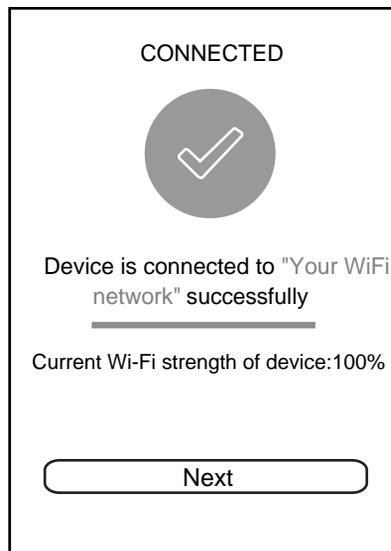


Note:

If the connection fails, the following page will appear.

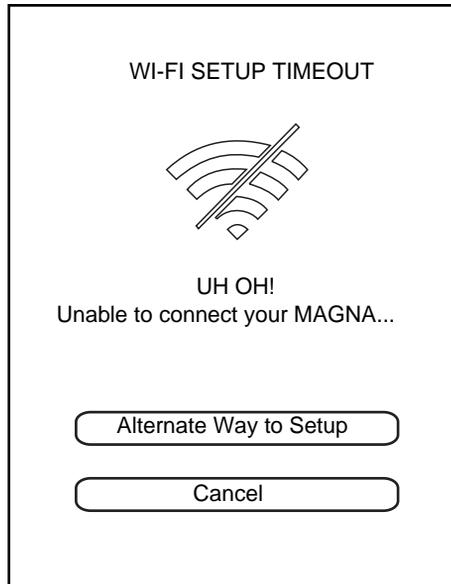

Then touch/tap the "Cancel" Button to reconnect following the on screen instructions again.

10. If connection is successful, the following screen will appear, touch/tap 'Custom...' to change the location name of the unit. Or, touch/tap one of the location in the name list as desired. Then touch/tap the "Next" Button to save the setting.

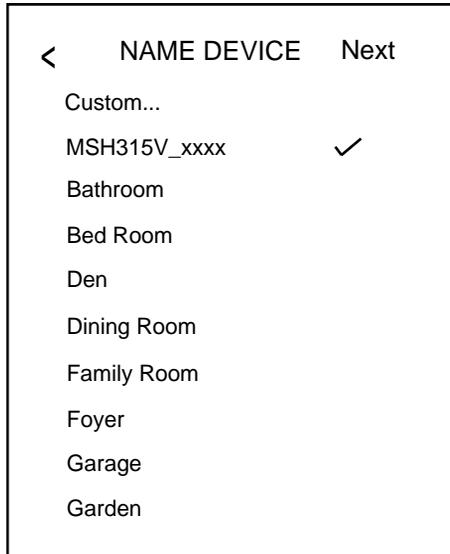

11. The following page will appear. If you already have an account, then touch/tap "Sign in with Amazon" Button on the following screen.



12. The following page will appear, input the account and password and touch/tap the "Sign in" Button on the screen to log on.

< AMAZON LOGIN

Sign in to MSH315V using your Amazon account

Sign in Forgot password?

Email (phone for mobile accounts)

Amazon password

Show password

Keep me signed in. Details

Sign in

New to Amazon?

Create a new Amazon account

13. If you do not have an Amazon account, then touch/tap "Create a new Amazon account" to start registration and create a new Amazon account following the on screen instructions.

< AMAZON LOGIN

Create Account

Name

Your email address

Create a password

Show password

Create your Amazon account

By create an account, you agree to Amazon's Conditions of Use and Privacy Notice.

Already have an account?

Sign in now

14. When the following page appears, touch/tap the "I agree" Button to log in Amazon.

< AMAZON LOGIN
MSH315V

We will provide MSH315V:

- Connectivity to Alexa so that you can interact with it using your voice.

You also accept [All Amazon terms found here](#). Alexa processes and retains audio and other information in the cloud to provide and improve our services, and may exchange information with third party services to fulfill your requests. [Learn more](#). Alexa also allows purchasing by voice using your default payment and shipping settings. You can require a speakable confirmation code, turn purchaing off, and see product and order details in your Alexa App. [Learn more](#). Your music will be saved to the cloud to protect your purchases.

Cancel I agree

15. After log in, the following page will appear. Touch/tap the language to set the desired language.

MSH315V_xxxx

Please choose your preferred language for Alexa.


English(United States)

English(United Kingdom)


Deutsch

You can change the language later in "Alexa Settings".


16. The following page will appear, touch/tap the "Next" Button on the screen.

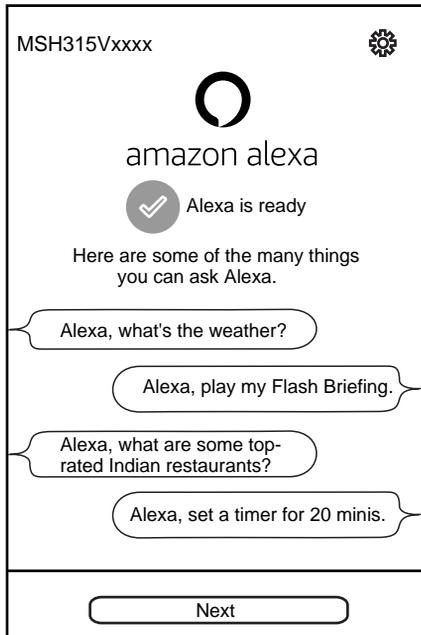

17. The following page will appear. Then you can mute the microphone function following the on screen instructions or touch/tap the "Next" button to enter to main menu.


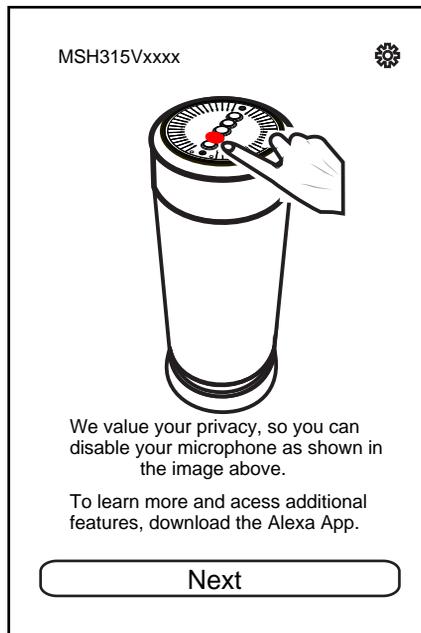


18. The main menu will appear as seen below. Set or reset the settings following the on screen instructions as seen below:

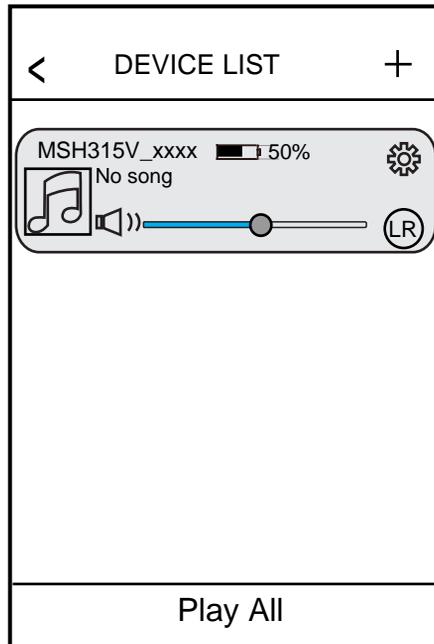

- Touch/tap the " + " to add more units to the network, repeat the procedure above and make connection as following on screen instructions.
- Touch/tap the " ⚙️ " to rename the unit, check the unit info or reset to the factory setting, check the preset content, and set or reset the Alexa settings.
- Touch/tap the " (LR) " to change the audio mode to L (left channel), R (right channel) and LR (stereo).

19. If more than one unit has been added into the DEVICE LIST, you can touch/tap the instruction “**How to switch between solo and multi mode?**” to learn how to switch solo and muti mode as seen below:

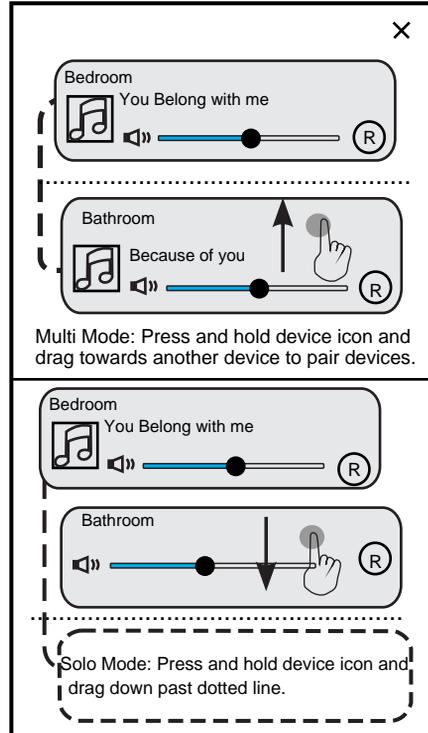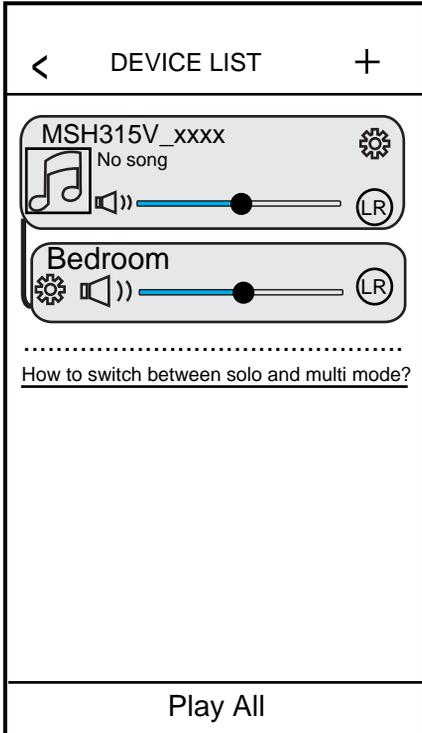

20. When finished, shut off the unit by pressing and holding the  /MODE button on top of the unit.

Notes:


To disconnect the unit from the current Wi-Fi network, press and hold the  /WPS Button until audible prompt “Connecting to your network, this may take one to three minutes” is heard then power off the unit. Power on the unit again then reconnect to desired Wi-Fi network as the previously instructed.

Operation after being added to the Wi-Fi network:


1. Connect your Mobile Device to the 2.4G Wi-Fi Network.
2. Power on the unit by pressing and holding the **⏻** /MODE Button on the top of the unit approximately 2 seconds until the Blue and Green Indicators on the top of unit illuminates and blinks.
3. Wait approximately 25 seconds until the Blue Indicators is not on. (Only the Green Indicator will illuminate and blink).
4. Wait a few more seconds, the unit will automatically connect to the same Wi-Fi network as your mobile device. The Green Indicator will stop blinking and audible prompt "Connected" will be heard.
5. Power on your Mobile Device and turn on the pre-installed Apps "MAGNAVOX Alexa Player (By CRAIG)". The following image will appear on the Mobile Device's screen:



6. Wait a few seconds, the following page will appear:

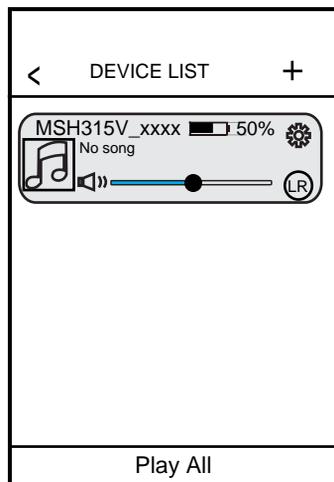

7. Touch/tap the mobile device's screen and slide to right repeatedly until the following selection menu appears. Then touch/tap the corresponding button to enter to the desired functions as below:

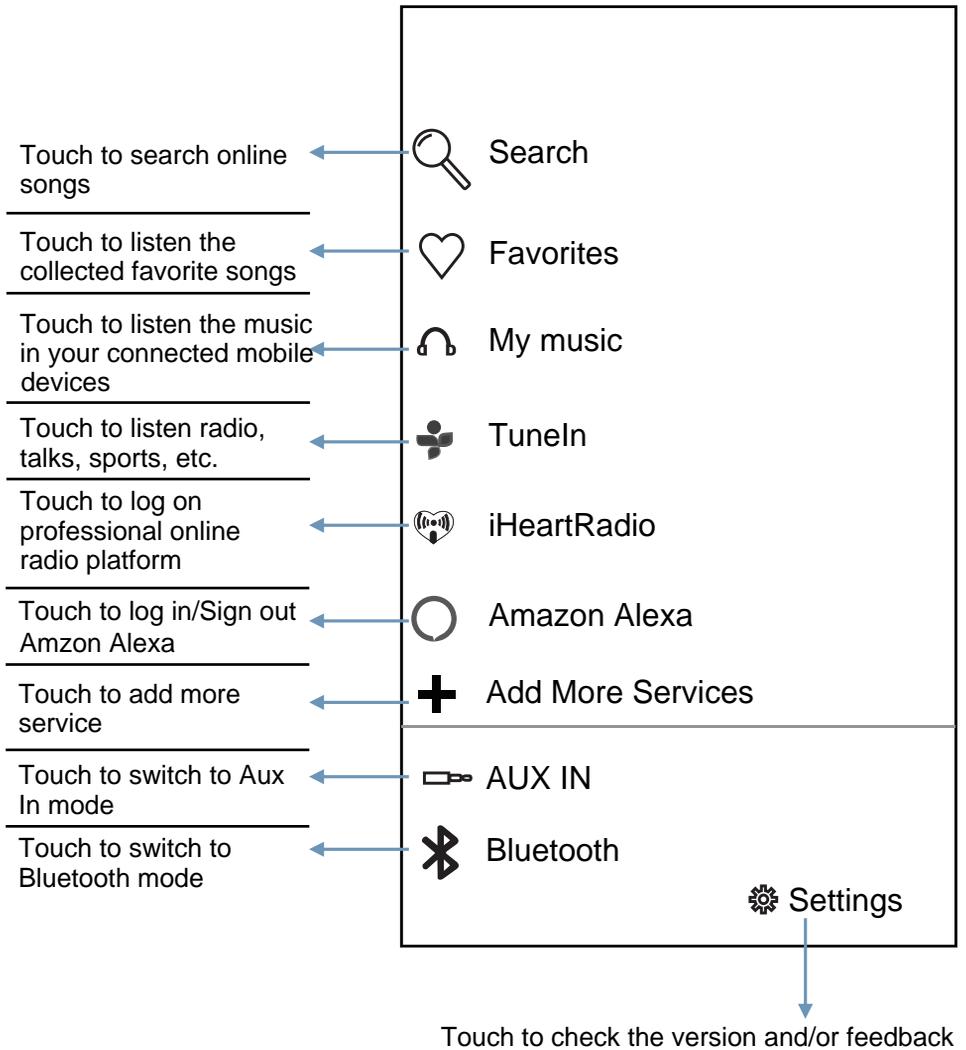

Notes:

Some of above function such as iHeartradio...need to install the correspondence Apps before use. Please touch/tap into it then download and install the correspondence Apps as the on screen instructions or visit its website such like:

iHeartRadio: <http://www.iheart.com>

Voice Control of Amazon Alexa:

If  Amazon Alexa was selected, you can use voice control as below:

1. Power on the unit; connected the unit to Wi-Fi network as previously instructed.
2. Power on your mobile device, open the "MAGNAVOX Alexa Player (By CRAIG)" Apps enter to the selection as instructed earlier. The White color Decorative Ring will illuminate.
3. Speak "Alexa" to the built-in microphone. The color of the Decorative Ring will turn to Blue. Then you can ask your question through the built-in microphone. The unit will answer you by audible reply. The typical question and answer will be:

Q: Alexa --- what's the time now?

A: It's XX (XX=Current time) o'clock now.

Q: Alexa --- what's the weather like?

A: The weather is not so cold.

Q: Alexa --- what day is today?

A: Today is XXXXX (XXXXX=Current day).

Q: Alexa --- what's the news today?

A: Here is the flash briefing.

Q: Alexa --- who is the president in USA?

A: The USA president is XX (XX=Name of USA president).

Q: Alexa --- what's the capital in USA?

A: The United States' capital is Washington D.C.

4. Or, press the  Button on the top of unit, the color of the Decorative Ring will turn to Blue. Then you can ask your question through the built-in microphone. The unit will answer you by audible reply. The typical question and answer will be:

Q: What's the time now?

A: It's XX (XX=Current time) o'clock now.

Q: What's the weather like?

A: The weather is not so cold.

Q: What day is today?

A: Today is XXXXX (XXXXX=Current day).

Q: What's the news today?

A: Here is the flash briefing.

Q: Who is the president in USA?

A: The USA president is XX (XX=Name of USA president).

Q: What's the capital in USA?

A: The United States' capital is Washington D.C.

5. During Amazon Alexa operation, you can use the following voice command to control the unit:

- Voice command: (Alexa)---play the song <XX> (XX=Name of the desired song)!
Action: The song will be played.
- Voice command: (Alexa) --- pause/stop the song!
Action: The song will be paused or stopped.
- Voice command: (Alexa) --- continue to play!
Action: The song will continue to play.
- Voice command: (Alexa) --- volume up!
Action: The volume will increase.
- Voice command: (Alexa) --- volume down!
Action: The volume will decrease.
- Voice command: (Alexa) --- fastforward!
Action: The track will be fastwarded.
- Voice command: (Alexa) --- rewind!
Action: The track will rewind.
- Voice command: (Alexa) --- previous!
Action: The track will skip to previous track.
- Voice command: (Alexa) --- next!
Action: The track will skip to next track.

6. To turn off the microphone. Press the  /WPS Button, the color of the Decorative Ring will turn to Red. To turn on again, press the button again. The color of the Decorative Ring will turn to White.

7. To shut off the unit, press and hold the  /MODE Button approximately 1 second then release the button.

Note: To learn more about Amazon Alexa, please visit its website: <http://alexa.amazon.com>

TROUBLESHOOTING

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built in battery drained	Recharge the battery
No sound or sound weak	Volume level in minimum position	Rise the volume level by press the VOL + Button on the top of unit
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by press the VOL - Button on the top of unit
	Volume level of the connected/paired device too high	Reduce the volume level of the connected/paired device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 9
	The external BT device too far from the unit	Place the external BT device close to the unit
Wi-Fi not functioning	The unit had NOT add in the Wi-Fi network	Add the unit into the Wi-Fi network as page 21
	The unit not in Wi-Fi mode	Power on the unit and enter to the Wi-Fi mode as page 12
	The unit and the mobile device is not in the same 2.4G Wi-Fi network	Set the unit and the mobile device in the same 2.4G Wi-Fi network
	The router was in power off mode	Power on your Wi-Fi router
Amazon Alexa not functioning	The unit is not in the Amazon Alexa operation mode	Power on the unit and enter to Amazon Alexa operate mode as page 24

SPECIFICATIONS

Power source: Built-in DC  3.7V, 2500mAh (9.25 WH) rechargeable Li-ion Battery,
Recharge by DC  5V through DC 5V (In) Jack (Micro USB Port)
on the unit or Charging station Port

BT Version:	4.1
BT Operation Distance:	about 32 Feet in open area
Wifi Type:	IEEE 802.11 b/g/n
Wifi Operation Distance:	about 96 Feet in open area

PACKAGE INCLUDES

- 1 x Owner's Manual
- 1 x Charging Station
- 1 x AC/USB Adapter (Input: AC 100-240V~, 50/60Hz, 0.5A;
Output: DC  5V, 1000mA)
- 1 x Audio Connection Cables with 3.5mm Plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$15 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: service@craigelectronics.com