

SIZE: 70x158mm

MAGNAVOX

PORTABLE SPEAKER

with Color Changing Lights and Bluetooth® Wireless Technology

OWNER'S MANUAL

MODEL: MMA3683n

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT


- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS:


- 1. MIC (Microphone Input) Jack
2. USB Port
3. DC 5V Jack (Micro USB Port, for charging only)
4. LINE IN Jack
5. TF (Micro SD) Card Slot
6. LED Display
7. MODE Button
8. REP ( Repeat ) Button
9. Light (On/Off) Button
10. Power On-Off/Volume Control Knob
11. M Button
12. M Button
13. M Button
14. Red Charge Indicator
15. Blue Power On Indicator
16. Blue BT (Bluetooth) Indicator
17. Decorative LED Lights

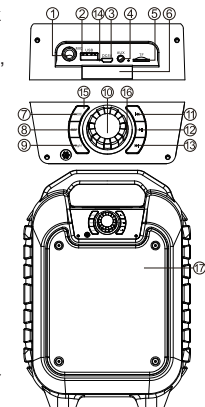

POWER SOURCE:

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 - 1. Connect the small plug from the supplied USB Connection Cable to the DC 5V Jack (Micro USB Port) on the top of unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Charge Indicator on the top of unit will illuminate. When charging is complete, it will turn off.



Notes:

- Your battery will last longer if you following these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of 5°C~35° (40°F~95°F).
C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will

damage battery. Battery life will be extended if you keep the battery fully charged.
D. Battery life naturally shortens slowly over time.
E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

- 1. Recharge the built-in Li-ion battery as previously instructed.
2. Turn the Power On-Off/Volume Control Knob clockwise to power on the unit and set the volume level as desired. The Blue Power On Indicator on the front of unit will illuminate.
3. Press the MODE Button repeatedly to switch to desired playback mode. The unit will display and sound the prompt with your selection (see list below):

Table with 3 columns: Playback Modes, Showing on Display, and Voice Prompt. Rows include BT (Bluetooth), TF (Micro SD) Card, USB, FM Radio, and Line In (AUX In).

Note:

If the TF (Micro SD) Card; USB Device and/or Line In Plug had NOT inserted/installed into the unit, the corresponding selection will not available.

- 4. During playback, turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
5. Press the Light (On/Off) Button to turn off the Decorative LED Lights; press again to turn it back.
6. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.

BT Mode:

- To play the music in TF (Micro SD) Card:
BT (Bluetooth) pairing:
First time use or re-pairing the unit to a new BT Device, pairs follows:
1. Power on the unit and enter to BT mode as previously instructed. The Blue BT Indicator on front of the unit will illuminate and blink. ("bLUE" will appear on the Display and you will hear an audible prompt say "Bluetooth ready for connection".)

- 2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the unit will sound a prompt "Bluetooth connected" and the Blue BT Indicator will stop blinking.
3. If pairing is complete you may now play music with your external BT Device.
4. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, " " will appear on the Display. Press again to resume normal playback, " " on Display will disappear.
• Press and release the M or M Buttons repeatedly to skip tracks.
• Press the REP (Repeat) Button once on the front of unit to activate repeat one function. "ONE" will appear on the Display and the current track will be playback repeatedly until the unit was shut off.
5. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.

Notes:


- When the external BT Device searched the unit, our model number "MMA3683n" will appear on the display of external BT Device.
• If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after pairing:

- 1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed. The Blue BT Indicator on the front of unit will illuminate and blink. (You will also hear an audible prompt say "Bluetooth ready for connection".)
3. Wait a few seconds until the unit is automatically paired to the external BT Device. The unit will sound a prompt "Bluetooth connected" and the Blue BT Indicator will stop blinking.
4. After pairing is complete you may now play music with your external BT Device.

TF (Micro SD) Card:


- To play the music in TF (Micro SD) Card:
1. In power off mode, insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the top of unit with contacts facing to front as illustrated below:

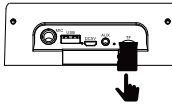

- 2. Power on the unit and enter to TF (Micro SD) Card mode as previously instructed. "SD" Indicator on the Display will illuminate and the unit will sound a prompt "Memory Card" then automatically play the music stored in the card.
3. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, " " will appear on the Display. Press again to resume normal playback, " " on Display will disappear.
• Press and release the M or M Buttons repeatedly to skip tracks.
• Press the REP (Repeat) Button once on the front of unit to activate repeat one function. "ONE" will appear on the Display and the current track will be playback repeatedly until the unit was shut off.
4. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.

USB:

- To play the music in USB Device:
1. In power off mode, connect the USB Device into the USB Port on the top of unit as illustrated below:

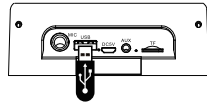

- 2. Power on the unit and enter to USB mode as previously instructed. "USB" Indicator on the Display will illuminate and the unit will sound a prompt "USB" then automatically play the music stored on the USB Device.
3. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to pause, " " will appear on the Display. Press again to resume normal playback, " " on Display will disappear.
• Press and release the M or M Buttons repeatedly to skip tracks.
• Press the REP (Repeat) Button once on the front of unit to activate repeat one function. "ONE" will appear

- on the Display and the current track will be playback repeatedly until the unit was shut off.
• Press the REP (Repeat) Button twice on the front of unit to activate repeat all function. "ALL" will appear on the Display and the all the tracks in the USD Device will be playback repeatedly until the unit was shut off.
4. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.
Notes:
• Up to 16 GB TF (Micro SD) Card/USB Device the unit supports to play.
• When inserting the TF (Micro SD) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
• Before replacing TF (Micro SD) Card/USB Device, make sure the unit has been powered off.
• You also need to download the desired music in MP3 format into the TF (Micro SD) Card/USB Device before insert into the unit.

FM Radio:


- 1. Power on the unit and enter to radio mode as previously instructed. "FM" Indicator on the Display will illuminate and the unit will sound a prompt "Radio".
2. In first time use (or removed the unit to a new location), search and store the available FM stations by press the M Button once. The unit will automatically to search and store all available FM radio stations then play the first stored FM station.
3. After settings, press the M or M Buttons repeatedly to select and plays the desired stored radio station.
4. During playback, turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
5. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.

Antennas:

This unit has a built-in FM antenna, which provides adequate reception in most areas. If reception is weak, reassemble the other direction/location to improve reception.

LINE IN:

- To listen from an external Audio Player such as MP3 Player, Discman...etc.
1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX Out / Line Out / Phone Jack on the external Audio Player.
2. Connect the other end of the cable to the LINE IN Jack on the top of unit as illustrated below:

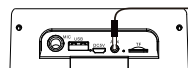

To LINE IN Jack

- 3. Power on the unit and enter to LINE IN mode as previously instructed. "Line" will appear on the Display and you will hear an audible prompt say "Line in".
4. Play the music on the connected Player as usual. (Make sure the volume level of the connected Audio Player is turned to high level.)
5. During playback:
• Turn the Power On-Off/Volume Control Knob to adjust volume level as desired.
• Press the M Button on the unit to mute, press again to turn the sound back.
6. When finished listening, turn the Power On-Off/Volume Control Knob counterclockwise until "Click" sound was heard to shut off the unit. The Blue Indicator on the front of unit will not light.

Microphone:

- To sing with the playing music:
1. Power on the unit and plays music in any modes as instructed earlier.
2. Connect the plug from the Microphone (Not included) to the MIC (Microphone) Jack on the top of unit.
3. Turn the Power On-Off/ Volume Control Knob to adjust the sound level.

Note:

If feedback noise (high audio frequency noise) is hearing from the speakers, turn the Power On-Off/ Volume Control Knob counterclockwise to reduce the volume level or moving the Microphone away from the speakers.

TROUBLESHOOTING:

Check the following before requesting service:

Table with 3 columns: SYMPTOM, POSSIBLE CAUSE, and POSSIBLE SOLUTION. Rows include Can't power on, No sound or sound weak, Sound distortion, BT not functioning, and Radio reception not good.

SPECIFICATIONS:

Table with 2 columns: Specification Name and Value. Rows include Power Source, Impedance of Speakers, Audio Power, FM Radio Frequency, BT Version, and BT Operation Distance.

PACKAGE INCLUDES:

- 1 x Owner's Manual
1 x USB Connection Cable (For Charging only)
1 x Audio Connection Cable with 3.5 mm plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange, or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$10 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China MMA3683n\_WC\_E0FK1\_B0US