



MAGNAVOX

7 INCH TFT SCREEN PORTABLE DVD/CD PLAYER

Owner's Manual


PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: MTFT750

Size: 148.5(W) x 210(H)mm (A5)



IMPORTANT SAFETY INSTRUCTION

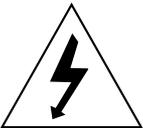	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

CAUTION:
THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.
TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.
USE CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 
WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.



DANGER:
Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

IMPORTANT SAFETY INSTRUCTION

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

For example, this unit may not have the capability to be connected to an outdoor antenna.

1) Read these instructions.

All the safety and operating instructions should be read before the product is operated.

2) Keep these instructions.

The safety and operating instructions should be retained for future reference.

3) Heed all warnings.

All warnings on the product and in the operating instructions should be adhered to.

4) Follow all instructions.

All operating and use instructions should be followed.

5) Do not use this apparatus near water.

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) Clean only with dry cloth.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15) Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

IMPORTANT SAFETY INSTRUCTION

17) Overloading


Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

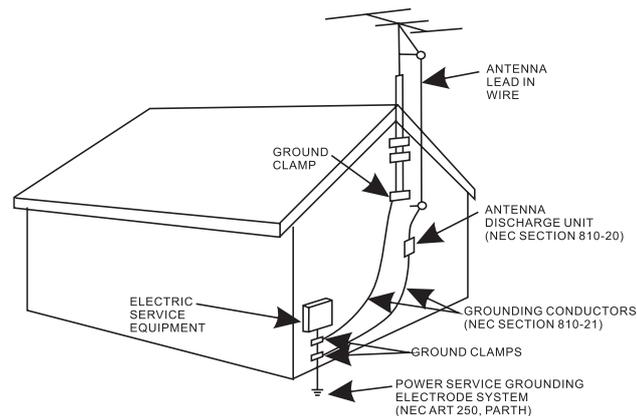

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operational condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore in the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance—this indicates a need for service.

25) Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

IMPORTANT SAFETY INSTRUCTION

NOTES ON HANDLING:

- When shipping the unit, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long time. They will leave marks on the finish.
- The top and rear panels of the unit may become warm after a long period of use. This is normal and not a malfunction.
- When the DVD player is not in use, be sure to remove the disc and turn off the power.

NOTES ON LOCATING THE DVD PLAYER:

- When you place this unit near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, move the unit away from the TV, radio or VCR.

NOTES ON CLEANING:

Use a soft, dry cloth for cleaning

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the unit.
- If you use a chemical-saturated cloth to clean the unit, follow that product's instructions.

Warning: Cleaning and adjustment of lenses and /or other components of playback mechanism should be performed by a qualified service technician.

NOTES ON MOISTURE CONDENSATION:

Moisture condensation damages the DVD player Please read the following carefully.

- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.

Moisture condensation occurs during the following cases:

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned room.
- When you use the DVD player in a humid place.

Do not use the DVD player when moisture condensation may occur.

- If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the AC Cord to wall outlet, turn on the DVD player and leave it ON for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture.

DISK COMPATIBILITY

The region number for this DVD Player is:
See the following page for information regarding region numbers.



PLAYABLE DISCS:


The following discs can be played back on this DVD player:



DISC TYPES:


DVD

Data on most DVDs are divided into sections called titles and chapters, each of which is given a title or chapter number. Some features of this DVD player will not operate with some DVD discs as they are preset. To see if a specific function is compatible, refer to the manual that accompanies the DVD disc.

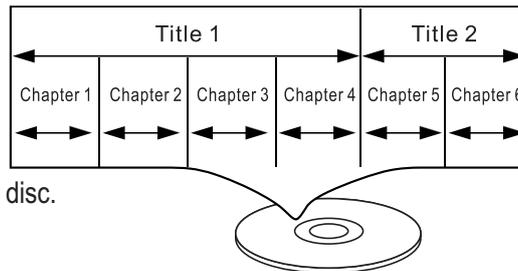

AUDIO CD

Data on an audio CD is divided into tracks, each of which is given a track number.

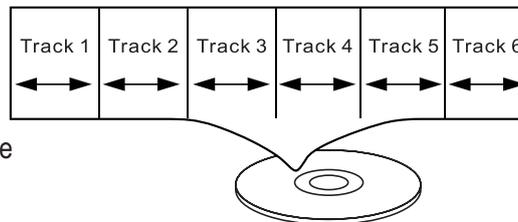

IMPORTANT:

It is important that you read the manual that accompanies the DVD disc, as there are features on certain DVDs that may not be compatible.

This player conforms to the NTSC and PAL color systems .

In North America, including USA , Canada and Mexico, use the NTSC setting.

If set to PAL, in North America, the TV picture may roll vertically.

If this occurs, set the TV system to NTSC.


Notes on Copyright:

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management Information:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc. You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes. When you try to play back an unauthorized disc, Wrong Region appears on the TV screen.


LOCATION OF CONTROLS

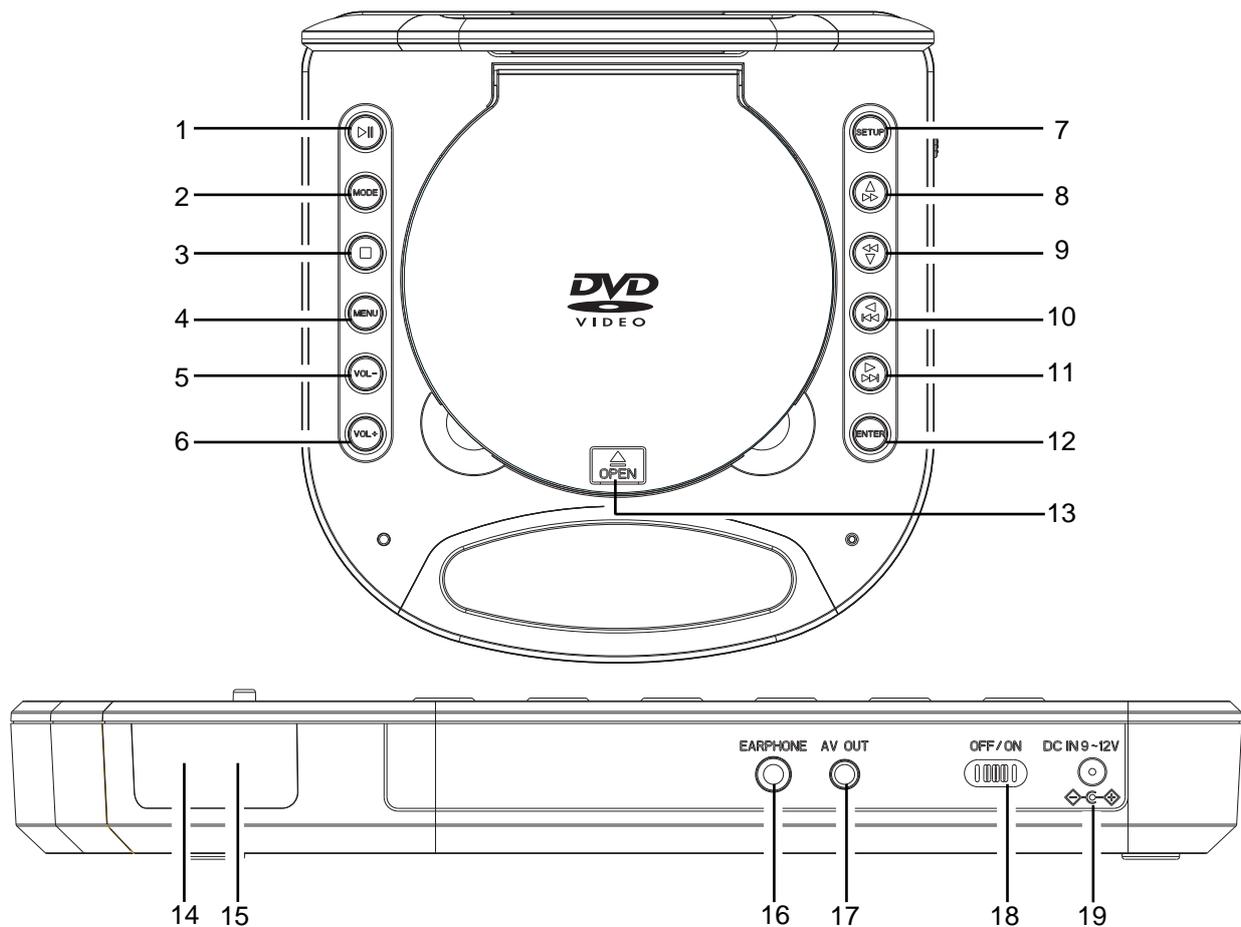

1. **▶||** Press to start playback or pause.
2. **MODE** Press to switch the aspect ratio to 4:3 or 16:9.
3. **■** In playback mode, press to stop.
4. **MENU** Press to enter to disc selection menu.(Function depends on the disc recording).
5. **VOL-** Press to decrease volume level.
6. **VOL+** Press to increase volume level.
7. **SETUP** Press to enter to setting menu.
8. **▲** • In setting menu, press to moving the cursor upward.
▶▶ • In disc playback mode, press to fast searching froward.
9. **◀◀** • In setting menu, press to moving the cursor downward.
▼ • In disc playback mode, press to fast searching backward.
10. **◀** • In setting menu, press to moving the cursor to left.
◀◀ • In disc playback mode, press to skip tracks backward.
11. **▶** • In setting menu, press to moving the cursor to right.
▶▶ • In disc playback mode, press to skip tracks forward.
12. **ENTER** Press to confirm the selection (settings).
13. **OPEN** Press to open the disc door.
14. Indicators
15. Remote Sensor
16. EARPHONE Jack
17. AV OUT (Audio/Video Output) Jack
18. Power ON/OFF Switch
19. DC IN Jack

LOCATION OF CONTROLS

REMOTE CONTROL

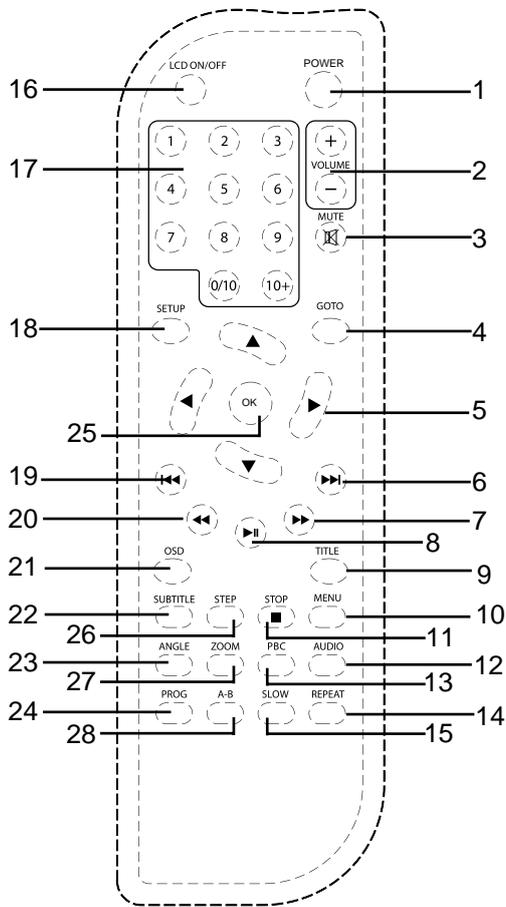

1. POWER Button
2. VOLUME +/- Buttons
3. MUTE Button
4. GOTO Button
5. Direction Buttons
6. ▶▶ (Skip Forward) Button
7. ▶▶▶ (Fast Searching Forward) Button
8. ▶|| (Play/Pause) Button
9. TITLE Button
10. MENU Button
11. ■ (STOP) Button
12. AUDIO Button
13. PBC Button
14. REPEAT Button
15. SLOW Button
16. LCD ON/OFF Button
17. Numeric Buttons
18. SETUP Button
19. ◀◀ (Skip Backward) Button
20. ◀◀◀ (Fast Searching Backward) Button
21. OSD (On Screen Display) Button
22. SUBTITLE Button
23. ANGLE Button
24. PROG (Program) Button
25. OK Button
26. STEP Button
27. ZOOM Button
28. A-B Repeat Button

CONTROLS

LCD ON/OFF

Press to turn on or off the LCD display.

POWER

Press to turn to standby mode. Press again to turn on. (For saving battery power, always turn off the unit by slide the Power ON/OFF switch to OFF position.)

VOL (VOLUME) +/-

Press to increase or decrease volume.

MUTE

Press to turn off the sound, press again to resume.

GOTO

~ To select the desired Title and Chapter, press the GOTO Button once, the Title and Chapter selection menu will appear on the screen. Use the Direction and Numeric Buttons to select the desired title and chapter then press the ENTER Button to start playback.

~ To play from a specific time point:
Press the GOTO Button twice, the time selection table will appear on the screen.
Use the Direction and Numeric Buttons to enter the time. The DVD will play at the selected time.

~ To play from a specific chapter:
Press the GOTO Button three times, the chapter selection table will appear on the screen.
Using the Direction and Numeric Buttons to enter the desired chapter. The DVD will play the movie from the selected chapter.

STEP

During movie playback, press STEP Button repeatedly to play the movie frame by frame.
Press the ►|| Play/Pause Button to resume normal playback.

ZOOM

During playback, press the ZOOM Button to zoom in/out of the picture. When zoomed in, press the Direction Buttons to select the area of the zoomed picture to watch. This function is not available on all discs.

TITLE

Press to return to disc's title page (where applicable).

MENU

Press to return to disc's menu page (where applicable).

AUDIO

During disc playback, press repeatedly to select the desired language or sound track. (where applicable)

ANGLE

During DVD playback, press repeatedly to select the viewing angle (where applicable).

SUBTITLE

During DVD playback, press repeatedly to select the desired subtitle language option (where applicable).

PBC

Press to turn PBC (Playback Control) On or Off. (Function operation in VCD 2.0 discs playback only).

OSD (On Screen Display)

During playback, press the OSD button repeatedly to read the information of playback status.

A-B Repeat

During Playback, press the A-B Button to define where you want the section to restart.

Press the A-B Button again to define where you would like the section to end, the unit will then play the selected section repeatedly and continuously. Press the A-B Button again to resume normal playback. (This function is not available on all discs).


SLOW

During playback, press the SLOW Button repeatedly to set the slow motion speed. Press the ►|| Play/Pause Button to resume normal playback.

REMOTE CONTROL BATTERY INSTALLATION

Battery installation:

1. Press the tab on the battery door and lift off.
2. Install two(2) x "AAA" size batteries into the battery compartment as illustrated following the polarity markings inside battery compartment.

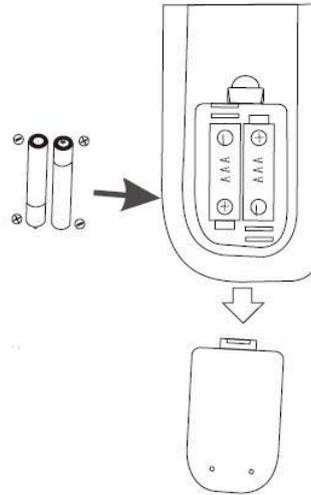

3. Replace the battery door.


Safety precautions:

Follow these steps when installing a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity(+/-) indicators when installing the.
A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device run out or the device goes unused for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; it can overheat and rupture. (Follow battery manufacture's instructions.)
6. Do not dispose of battery in fire. Battery may explode or leak.
7. Clean the battery contacts, and the contacts in the device, prior to installation.

Remote Control Sensor

1. When there is an obstacle blocking between the sensor, the remote may not work.
2. When direct sunlight, or any other strong light shines on the remote control, the remote operation may be unstable.

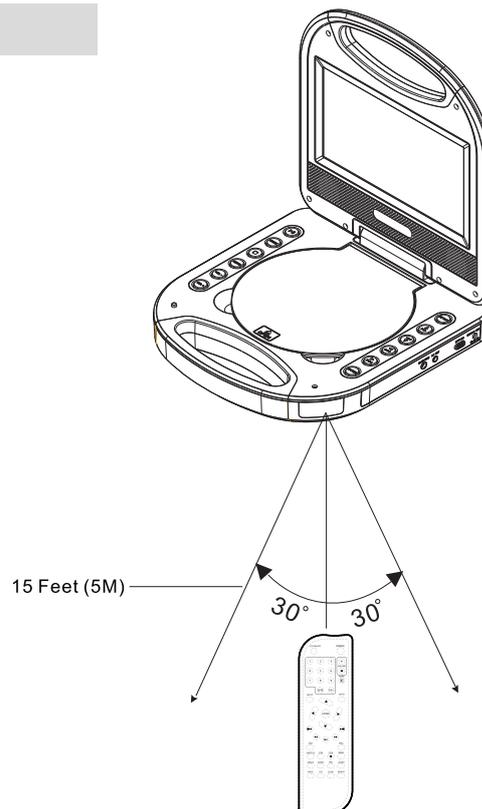


POWER SOURCE

The unit has a built-in Lithium-ion rechargeable battery. Recharge it as follows:

Charging by supplied AC/DC Adaptor:

1. Connect the small plug from the AC/DC Adaptor to the DC IN Jack on the right of unit.
2. Connect the AC/DC Adaptor to the wall outlet (AC 100-240V~; 50/60Hz).
3. While charging, the Red Indicator will turn on. When charging is complete, it will turn off.

The AC/DC Adaptor is intended to be used in a wall or floor mount position, do not use on a ceiling or downward facing outlet.

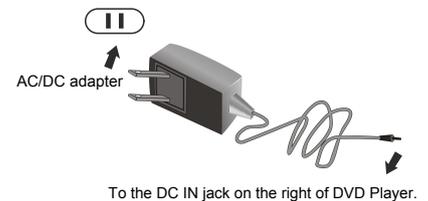


Notes: Your battery will last longer if you follow these simple guidelines for caring and storing it.

- A. Before first time use, charge it approximately 3 hours until it is fully charged.
- B. Recharge and store the device within a temperature range of 5°C~35°C (40°F~95°F).
- C. Do not overcharge (longer than 24 hours). Excessive charging or discharging may hurt the battery's life.
- D. Battery life naturally reduces slowly over time.
- E. The rechargeable battery in this product is not user replaceable.


Charging by the supplied Car Adaptor:

1. Connect to the cigarette lighter socket of a vehicle that has a 12V battery as illustrated below. It is **NOT** compatible with 24V plugs.
2. This is a negative grounded Car Adapter. Use with a plus grounded outlet can cause it to malfunction.
3. Do **NOT** plug in the Car Adapter until the car ignition is turned on.
4. Disconnect the Car Adapter from the cigarette lighter and the unit after use.

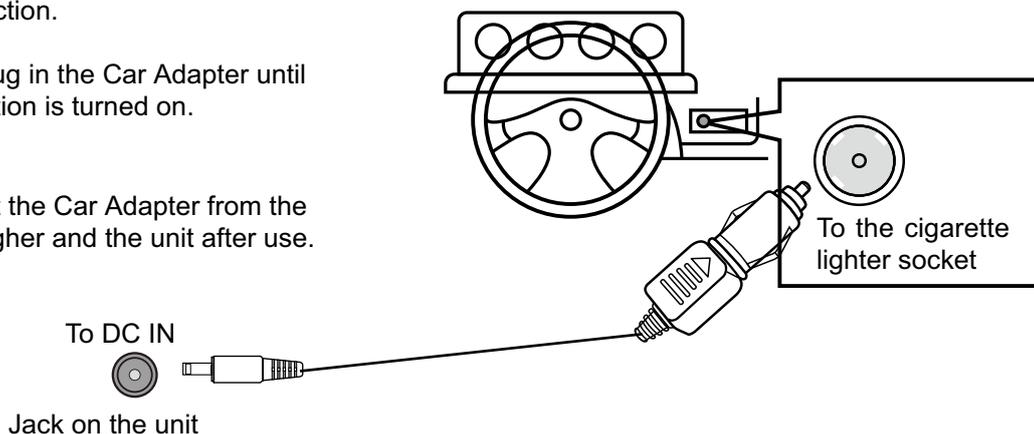

CONNECTIONS

1. Connecting to a TV with AV connection cable

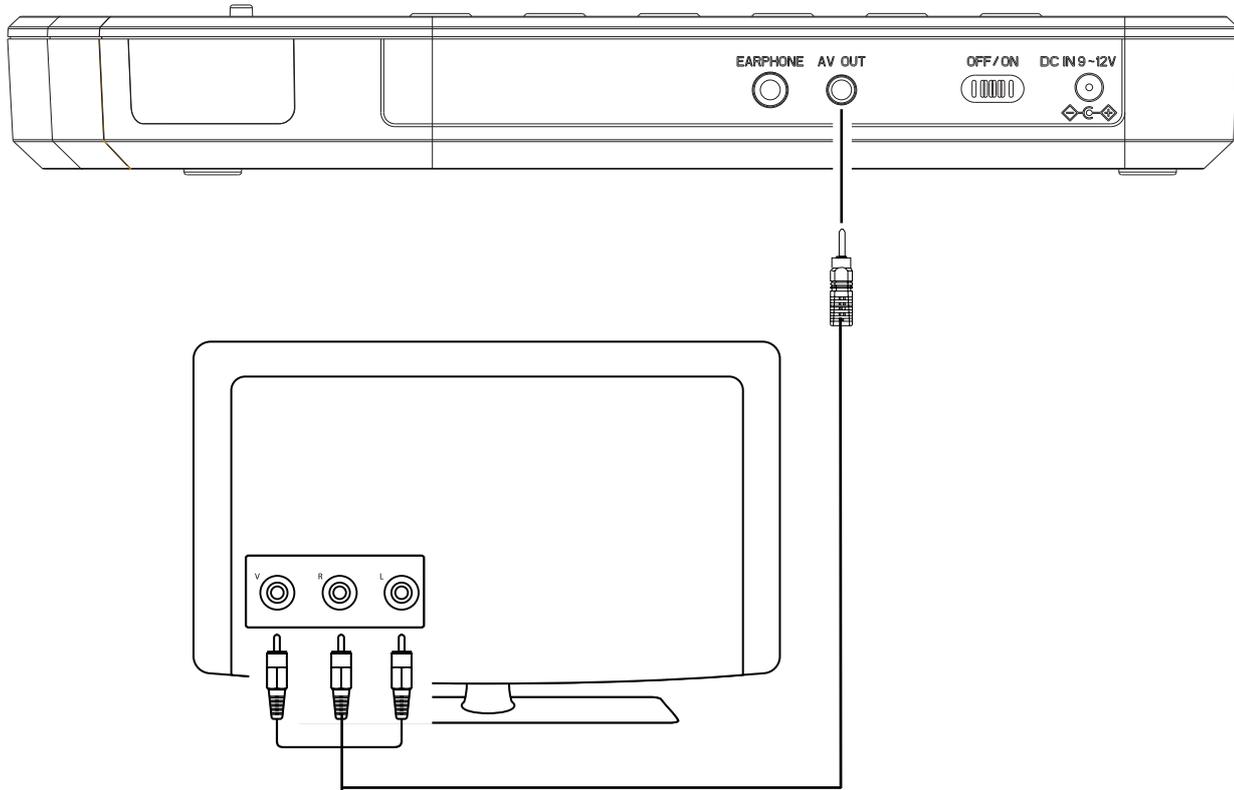

Connected to the TV

Video input jack (Yellow)

Audio left channel input jack (White)

Audio right channel input jack (Red)

OPERATION

DVD Playback:

1. Lift up the panel. Slide the Power Switch to the "ON" position to power on the unit, the Green Indicator on the right corner of the front panel will turn on.
2. Press the "OPEN" Button to open the disc tray. Place the disc on the center spindle with the label side facing up. Close the disc door and the player will automatically start playback.
3. During playback:
 - ~ Press the ►► / ◀◀ Buttons repeatedly to search for a specific section.
Press the ►|| Play/Pause Button to resume normal playback.
 - ~ Press the ►► or ◀◀ Buttons to skip to a specific track.
 - ~ Press the ►|| Play/Pause Button to pause, press again to resume normal playback.
 - ~ Press the VOL (VOLUME) +/- Buttons to raise and/or lower the volume.
 - ~ Press the STOP ■ Button to stop playback. The player will remember the point where disc was stopped.
Press the Play/Pause ►|| Button again, to resume playback from that point. To stop playback and remove the saved "Stop-Point", press the STOP ■ Button twice.
4. To power the unit off, press the POWER Button on the Remote Control to turn the player to standby mode. The Green Indicator will remain lit. Press the POWER Button again to wake the player from standby mode. (To save energy, always power down the player by sliding the Power Switch to the OFF position and unplug the AC/DC Adapter from the outlet.)

Repeat Playback:

- To replay a single chapter; press the REPEAT Button  During playback. "Chapter" will appear on the screen and the current chapter will replay continuously.
- To replay the current title; press the REPEAT Button  twice. "Title" will appear on the screen and the title will replay continuously.
- To replay the entire disc; press the REPEAT Button  three times. All files on the disk will play repeatedly.
- To turn off repeat mode: Press the REPEAT Button repeatedly until all the repeat indicators disappear from the screen.

Playback of a CD:

1. Lift up the panel. Slide the Power ON/OFF Switch to the "ON" position to power on the unit, the Green light on the right corner of the panel will illuminate.
2. Press the "OPEN" Button to open the disc tray. Place the disc on the center spindle with the label side facing up. Close the disc door and the player will play automatically.
3. During playback:
 - ~ Press the ►► / ◀◀ Buttons repeatedly to search for a specific section forward/backward.
Press the ►|| Play/Pause Button to resume playback.
 - ~ Press the ►► or ◀◀ Buttons repeatedly to skip to a specific track.
 - ~ Press the ►|| Play/Pause Button to pause the track, press it again to resume playback.
 - ~ Press the VOL (VOLUME) +/- Buttons to raise or lower the volume level.
 - ~ Press the STOP ■ Button to stop playback. The player will remember the point where disc was stopped.
When press the Play/Pause ►|| Button again, playback will resume from that point. To stop playback completely, or to restart from the beginning, press the STOP ■ Button twice.
4. To power the unit off, press the POWER Button on the Remote Control to turn the player to standby mode. The Green Indicator will remain lit. Press the POWER Button again to wake the player from standby mode. (To save energy, always power down the player by sliding the Power Switch to the OFF position and unplug the AC/DC Adapter from the outlet.)

Repeat Playback:

- To replay a single chapter; press the REPEAT Button  During playback "Chapter" will appear on the screen and the current chapter will replay continuously.
- To replay the entire disc; press the REPEAT Button  twice times. All files on the disk will play repeatedly.
- To turn off repeat mode: Press the REPEAT Button repeatedly until all the repeat indicators disappear from the screen.

OPERATION

Playback of a JPEG (PICTURE) MP3 disc:

1. Turn on the player and place the disc into the player as previously instructed.
The folder/files list will appear on the screen.
2. Use the Direction Buttons to select and highlight the desired folder then press the OK Button on the Remote Control or ENTER Button on the unit, a file list will appear on the screen.
3. Using the Direction Buttons, select and highlight the desired file and press the OK Button on the Remote Control, the ENTER Button on the unit, or the Play/Pause▶II Button to begin playback.

Repeat:

During playback, press the REPEAT Button repeatedly to select the REPEAT mode:

- ~ Repeat One: Play the current track repeatedly.
- ~ Repeat Folder: Play the tracks in the current folder repeatedly.
- ~ Folder: Normal playback.

Notes:


1. JPEG (IMAGE) CDs take significantly longer to load than Music or Video disks.
2. All other operation is similar to CD disc playback.

IMPORTANT NOTES:

- Some discs may take a few seconds to load. If a disc is inserted incorrectly, dirty, damaged, or is not inserted at all, "NO Disc" or "Bad Disc" will appear on the display.
- Always hold the disc without touching either of its surfaces. When inserting a disc, position it with the printed title side facing up, align it with the guides and place it in its proper position.
- It is important that you read the manual that accompanies the DVD discs as there are features on this DVD player that cannot be used with certain DVDs.

CD OR DVD PROGRAMING

1. During CD or DVD playback, press the **PROG** (Program) Button. The Program menu will appear as illustrated below.

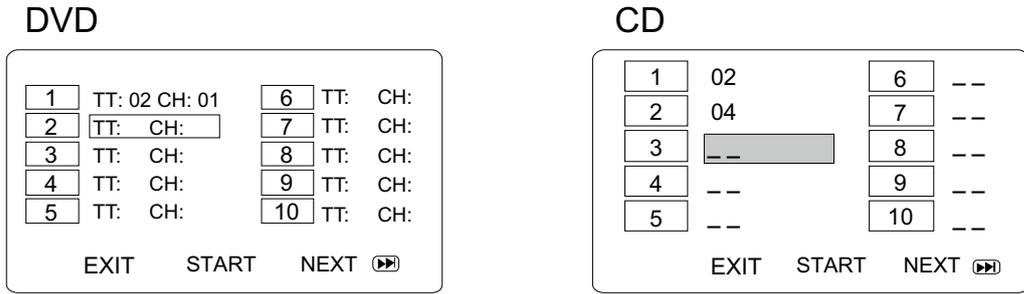


2. Use the Arrows and Numeric Buttons to select and set the desired TT (Title), CH (Chapters), or tracks (for CD).
3. Use the Arrows to select and highlight the "START" Button on the screen, then press the OK Button on the Remote Control, or the ENTER Button on the unit, to start playback.

SYSTEM SETUP

Setting Menus:

Press stop to get to the main menu, then press the SETUP Button. The setting menu will appear on the screen as illustrated below. Using the arrow (Direction) ◀, ▶, ▲, ▼ Buttons to select the option you would like to change. Press the OK Button on the Remote Control or the ENTER Button on the unit to confirm the selection. After completing your changes, press the SETUP Button to save the settings and exit to the main menu.

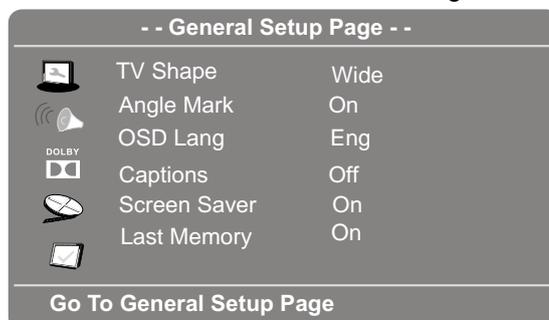

In General Setup Page:

1. If "TV Shape" is selected, use the Arrow and ENTER/OK Buttons to select the aspect ratio you desire.
2. If "Angle Mark" is selected, use the Arrow and ENTER/OK Buttons to select "On" or "Off". If "On" is selected, when multi-angles are available in the playing DVD, the multi-angle logo  will appear on the screen.
3. If "OSD Lang" (On Screen Display Language) is selected, use the Arrow and ENTER/OK Buttons to set the desired language.
4. If "Captions" is selected, use the Arrow and ENTER/OK Buttons to select "On" or "Off". If "On" is selected, when captions are available on the DVD, they will show on the screen automatically.
5. If "Screen Saver" is selected, use the Arrows and ENTER/OK Buttons to select "On" or "Off". If "On" is selected, the screen saver will play when the unit stops playing, or when the image is paused, for 5 minutes.
6. If "Last Memory" is selected, use the Direction and ENTER/OK Buttons to select "On" or "Off". If "On" is selected, the unit will resume playback from the position the disc was stopped at the last time it was played.

In The Speaker Setup Page:

If "Speaker Setup" is selected, press the ENTER/OK Buttons, and the sub-setting menu will appear.

1. If "Downmix" is selected, use the Arrow and ENTER/OK Buttons to set it to L/R Stereo.
 - ~ If set to "Lt/Rt", the rear left or rear right channels will play on both Left and Right Speakers.
 - ~ If set to Stereo, the rear left channel will play on the Left Speaker and the rear right channel will play on the Right Speaker.

In Dolby Setup Page:

1. If Dual Mono is selected, using the Direction and ENTER/OK Buttons to set it to Stereo, L-Mono (Play Left channel on all speakers), R-Mono (Play Right channel on all speakers) or Mix-Mono (Mixed Right and Left channel then plays on all speakers) as desired. (Functions depend on the recording of the disc).
2. If Dynamic is selected, using the Direction and ENTER/OK Buttons to set the dynamic level as desired or turn it off.

SYSTEM SETUP

In Video Setup Page:

1. If Picture is selected, using the Direction and ENTER/OK Buttons to set the picture quality such like Sharpness; Brightness; Contrast; Hue or Saturation as desired.
2. If Panel Display is selected, using the Direction and ENTER/OK Buttons to set the aspect ratio of the panel to 16:9 or 4:3 to match the aspect ratio of the playing movie.


In Preference Setup Page:

1. If TV Type is selected, using the Direction and ENTER/OK Buttons to set to PAL, AUTO or NTSC.
(Note: The TV system in US, Canada and Mexico is NTSC).
2. If Audio, Subtitle or Disc Menu is selected, using the Direction and ENTER/OK buttons to select and set the priority of the available language. (Functions depend on the recording of DVD).
3. If Parental is selected, using the Direction and ENTER/OK Buttons to set the rating level as desired as follow:
 - ~ Press the ► Button to enter, the rating level list will appear.
 - ~ Press the ▲ or ▼ Button to select the desired level.
 - ~ Press the ENTER/OK Buttons to enter, password enter window will pop up.
 - ~ Enter the six digit password (default password is 136900) by pressing the Numeric Buttons.
 - ~ Press the ENTER/OK Buttons to save the settings and exit.
 - ~ Rate levels:
 1. Kid Saf: Kid safe
 2. G: All ages
 3. Pg: Parental Guidance
 4. Pg13: Parental Guidance less than 13 years old
 5. Pgr: Under 17 years old, Parental Guidance suggested
 6. R: Under 17 years old, Parental Guidance strongly
 7. Nc17: 17 years old or above
 8. Adult: Adult only
4. If Password is selected, press the ENTER/OK Buttons to enter, the subsetting menu will appear.
 - ~ If Password Mode is selected, using the Direction and ENTER/OK buttons to set it On (activate the rating level setting) or Off (Password is needed).
 - ~ If Password is selected, press the ENTER/OK Buttons twice to enter. The New password setting menu will appear.
 - ~ Enter the six digit password. The Column of new Password will be highlighted.
 - ~ Enter the new six digit password. The Column of Confirm Pwd will be highlighted.
 - ~ Enter the new password again. OK Button on the screen will be highlighted. Press the ENTER/OK Buttons to save the setting and exit.
5. If Default is selected, using the Direction and ENTER/OK Buttons to reset all setting to default setting or press the SETUP Button to exit without changes.


CARE AND MAINTENANCE

Caring for Discs

- Treat the disc carefully. Handle the disc only by its edges. Never allow your fingers to contact with the shiny, unprinted side of the disc.

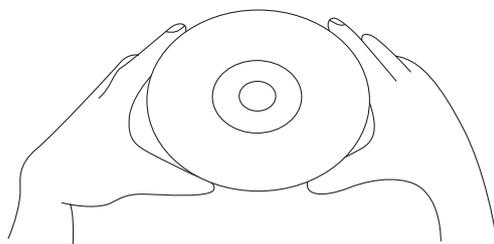

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

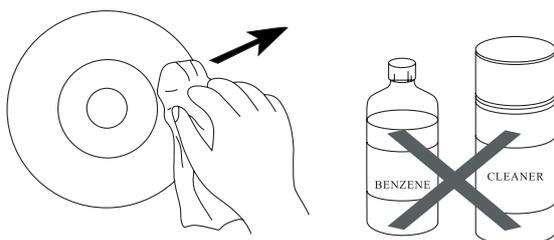

- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

SPECIFICATIONS

Power Source: Built-in DC \approx 7.4V; 1200mAH (8.88WH) Lithium-ion rechargeable battery, recharge by DC \approx 9-12V, 1A \ominus \oplus through DC IN Jack

Power Source of Remote Control: DC \approx 3V, 2 x AAA Size Batteries (included)

Disc Compatibility: DVD/CD/CD-R/CD-RW/DVD \pm R/DVD \pm RW/MP3/JPEG

Play time after fully charge: Approximate 2.5 Hours

Accessories

1 x User's Manual

1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60Hz, 0.5A; Output: DC \approx 12V, 1000mA \ominus \oplus)

1 x Car Adaptor (Input: 12 V \approx 2A; Output: 12 V \approx 2A; Type of Built-in Fuse: F2AL250V)

1 x Remote Control

2 x AAA Size Batteries (For Remote Control)

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**



LIMITED WARRANTY

Magnavox warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$15 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: service@craigelectronics.com