

MAGNAVOX

**OWNER'S MANUAL
OSCILLATING CERAMIC TOWER HEATER/FAN
ITEM NO.: MG-MTPT1605**



120V ~ 60Hz 1500W


When using an electrical appliance, basic safety precautions should always be observed, including the following:

1. The product is for household and indoor use only.
2. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
3. Handle the product with care, it can be damaged by impacts, blows, or accidental drops, even from a low height.
4. Choose an appropriate location. It must be sturdy, big enough, level, stable and far away from in flammable materials and items (e.g. curtains, furniture, doors, etc.). Maintain a minimum distance of 1.5 m.
5. The product must not be exposed to extreme temperatures, direct sunlight or strong vibrations.
6. A safety switch at the bottom of the heater automatically shuts off the heater when it is lifted off the floor or tips over.
7. Despite the safety switch there is a risk of fire when the heater tips/falls over! Furthermore, this could result in personal injury or damage to the product.
8. Never use the heater in vehicles and similar moving objects or spaces; it is only suitable for use in buildings.
9. Unwind the mains cable completely during operation. The power cable must not be pinched or damaged by contact with sharp edges. Do not place any objects on the cable, and do not allow it to become kinked.
10. Do not operate the device in environments where there are high levels of dust, flammable gases, vaporous or solvents. There is a danger of fire and explosion!
11. The heater will remain hot for some time after it is turned off. Please handle with care.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. Children of less than 3 years should be kept away unless continuously supervised.
14. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
15. Warning: In order to avoid overheating, do not cover the heater.



16. The heater must not be located immediately below a socket-outlet.
17. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

FUNCTION DESCRIPTION

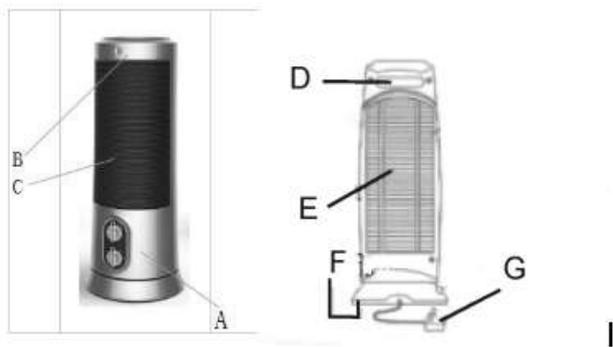


- A Operating-elements
- B Control lamp
- C Air outlet
- D Handle
- E Air inlet
- F Tip-over-switch
- G Connection cable

Operating-elements TFH F15VVC(Fig. 4):

- (A) POWER OFF =OFF
 FAN= cold air
 LOW=750W
 HIGH=1500W

(B) OSCILLATION

- OFF= NO OSCILLATION
 SWING= OSCILLATION

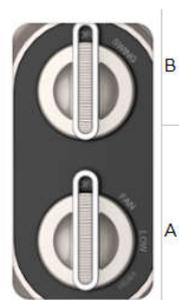

Overheating safety device

A thermal overload protector is built in to prevent overheating. When an overheat temperature is reached, the heater will be automatically shut off. It can only resume operation when the user resets the unit.

If the heater does not switch on, the safety device has been activated. Remove the mains plug from the wall socket. Let the heater cool down for 30 minutes. Check if the

heater had been placed correctly. Check if anything is obstructing the air flow. If necessary, clean the grilles with a vacuum cleaner. Replace the plug into the wall socket and switch the heater on again.

OTHER FEATURES:

This heater is equipped with a safety tip-over switch which automatically shuts off the heater element if the heater is not in the upright position, the heater will resume back to normal when the heater is returned to the upright position.

Storage

If you do not use the heater for an extended period of time, switch it off (switch position "0") and pull the mains plug from the mains socket.

Let the heater cool off completely and subsequently store it in a clean, dry location.

Maintenance and Cleaning

- Only a professional repair shop should attempt to maintain or repair the device. The product contains no parts that require servicing. Therefore, do not open/dismantle it.
- The heater must be switched off and disconnect plug from mains socket before cleaning.
- To clean the outside of the product, a dry, soft and clean cloth is sufficient.
- Dust can easily be removed using a clean, soft and long-haired brush and a vacuum cleaner.
- Do not use abrasive cleaning agents, cleaning alcohol or other chemical solutions, since these could damage the housing or even impair operation.

CUSTOMER ASSISTANCE

FOR IMMEDIATE CUSTOMER SERVICE, CALL: 1-855-463-3518

A CUSTOMER SERVICE REPRESENTATIVE WILL ASSIST YOU WITH ANY QUESTIONS REGARDING YOUR HEATER. www.magnavox.com

MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

Made in China

Distributed by:

OBO, Baltimore, MD