

MAGNAVOX

 
UNIVERSAL REMOTE


OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MC348

LOCATION OF CONTROLS:

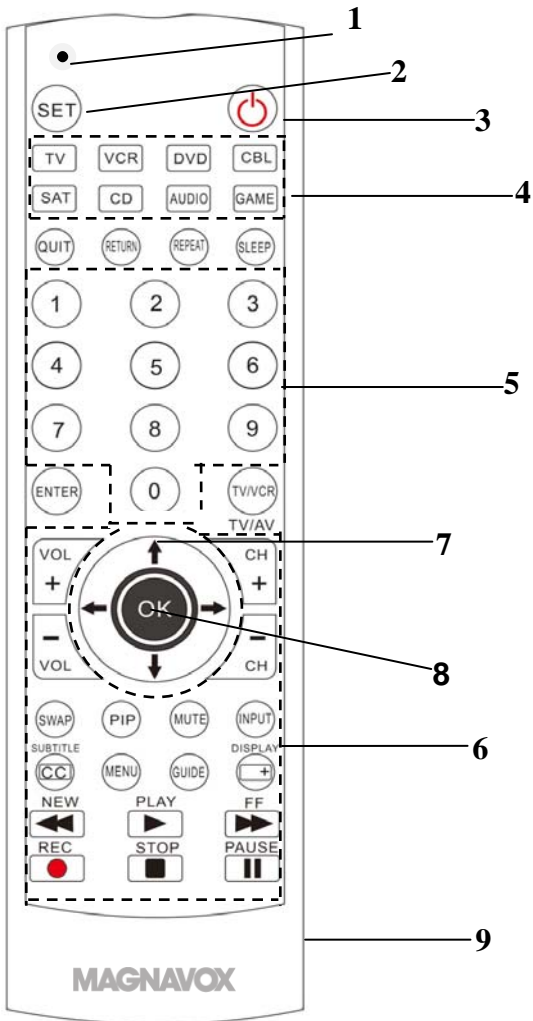


1. Indicator
2. SET Button
3.  Power On-Off Button
4. Device selection Buttons
 TV: Television
 VCR: Video Cassette recorder
 DVD: DVD Player
 CBL: Cable box
 SAT: Satellite receiver
 CD: CD Player
 Audio: Audio device
 Game: Game player
5. Numeric Buttons
6. Function Buttons
7. Navigator Buttons
8. OK Buttons
9. Battery Compartment (On the rear)

POWER SOURCE:

Install or replacing the batteries when it is drained as follows:

 1. Slide out the battery door on the rear of remote then lift it up as the illustrated below.
2. Install two (2) x AAA size batteries (not included) into the battery compartment as the polarity markings inside it.
3. Close the battery door.

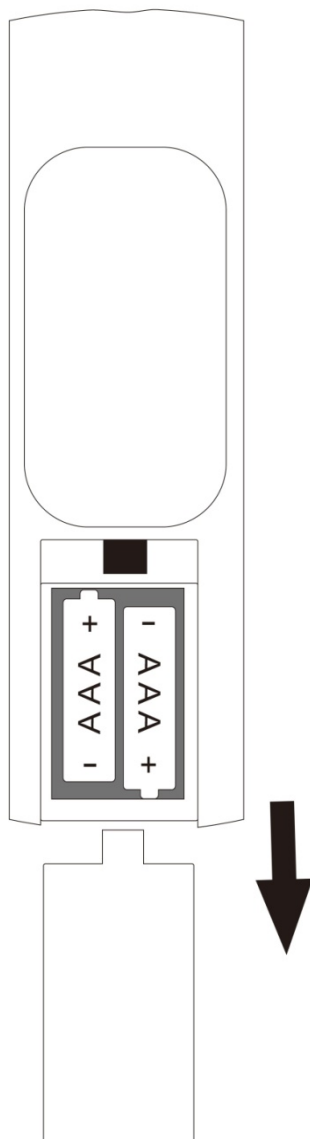

BATTERY PRECAUTIONS:

Follow these Battery Precaution when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
6. Do not dispose of battery in fire. Battery may explodes or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

SETTING UP:

You must set up the Universal Remote before operating with your device as follows:

Setup with device code:

1. Use only the size and type of battery specified.
2. Power on your desired device (EX: TV) as usual.
3. Find the four (4) digit device code for it in the attached Code List.
4. Press and release the corresponding device's selection button on the Universal Remote (EX: TV Button).
5. Press and hold the SET Button approximately 3 seconds until the LED Indicator is illuminated then release the button.
6. Enter the four (4) digit code for your device by pressing the numeric buttons. The LED Indicator will turn off. (If the code is invalid, the Indicator will stay illuminated. Repeat the setting procedures from 2-5 again to reset a valid code.)
7. Aim the Universal Remote to the remote sensor for your device then try operating the device. If the device is responds correctly, it means you have entered the right code. If not, check the provided code list for other codes that may apply to your unit. Start the process again from Step 2.

NOTE:

If the codes provided do not work to pair the Universal Remote to your device, try the following methods.

Setting with the brand name code:

1. Find the single digit brand code of your device on the attached Brand Name Code List.
2. Power on your desired device (EX: TV) as usual. Aim the Universal Remote to the remote sensor for you device.
3. Press and hold the corresponding device's button and the numeric button of the brand code of your device at the same time. (For example: Press and holding the "TV" and "1" Buttons at the same time.)
4. Wait approximately 2 seconds, the LED Indicator will start blinking.
5. Release the numeric button and keep holding the device button. A different infrared signal of "Power off" is sent every 0.5 second.
6. Once your device is shut off, release the device button immediately to save the setting and exit.
7. Aim the Universal Remote to the remote sensor for your device then operation the device with the Universal Remote. If the device is responds correctly, it means you have right settings. Otherwise, set again starting from step 3 or try the following setting methods.

Auto Setting:

1. Power on your desired device (EX: TV) as usual.
2. Press and release the corresponding device's selection button of your device (EX: TV Button).
3. Press and holding the SET Button approximately 3 seconds until the LED Indicator is illuminated then release the button.
4. Aim the Universal Remote to the remote sensor for your device then press and release the POWER Button. A different infrared signal of "Power off" is sent every 0.5 second.
5. Once your device is shut off, press the OK Button immediately to save the setting and exit.
6. Aim the Universal Remote to the remote sensor for your device then operate the device with the Universal Remote. If the device is responds correctly, it means you have right settings. Otherwise, set again starting from step 2 or try the following setting methods.

Manually setting:

1. Power on your desired device (EX: TV) as usual.
2. Press and release the corresponding device's selection button for your desired device (EX: TV Button).
3. Press and hold the SET Button approximately 3 seconds until the LED Indicator is illuminated then release the button.
4. Aim the Universal Remote to the remote sensor of your device (EX: TV) then press the CH + or – buttons on the Universal Remote repeatedly to send different infrared signals; LED Indicator will blink.
5. Once your device is shut off, press the OK Button to save the settings and exit, the LED Indicator will turn off.
6. Aim the Universal Remote to the remote sensor for your device (such like TV) then operation the device with the Universal Remote.

 
OPERATION:

1. Repeat the setting procedure until all desired devices (up to 8 devices) was been set.
2. Press the desired device selection button (EX: TV) on the Universal Remote.
3. Aim the Universal Remote to the remote sensor of you device then operation the device with the Universal Remote.

NOTES:

1. Buttons may be titled differently on your Universal Remote from the titles on the original manufacturer's controller.
2. Some of buttons may not respond as your original remote.
3. If the Universal Remote is halt, abnormal operation or you wants to reset all settings. Reset the Universal Remote by take out all batteries approximately 1 minute then reinstall the batteries.

4. Remote Distance:

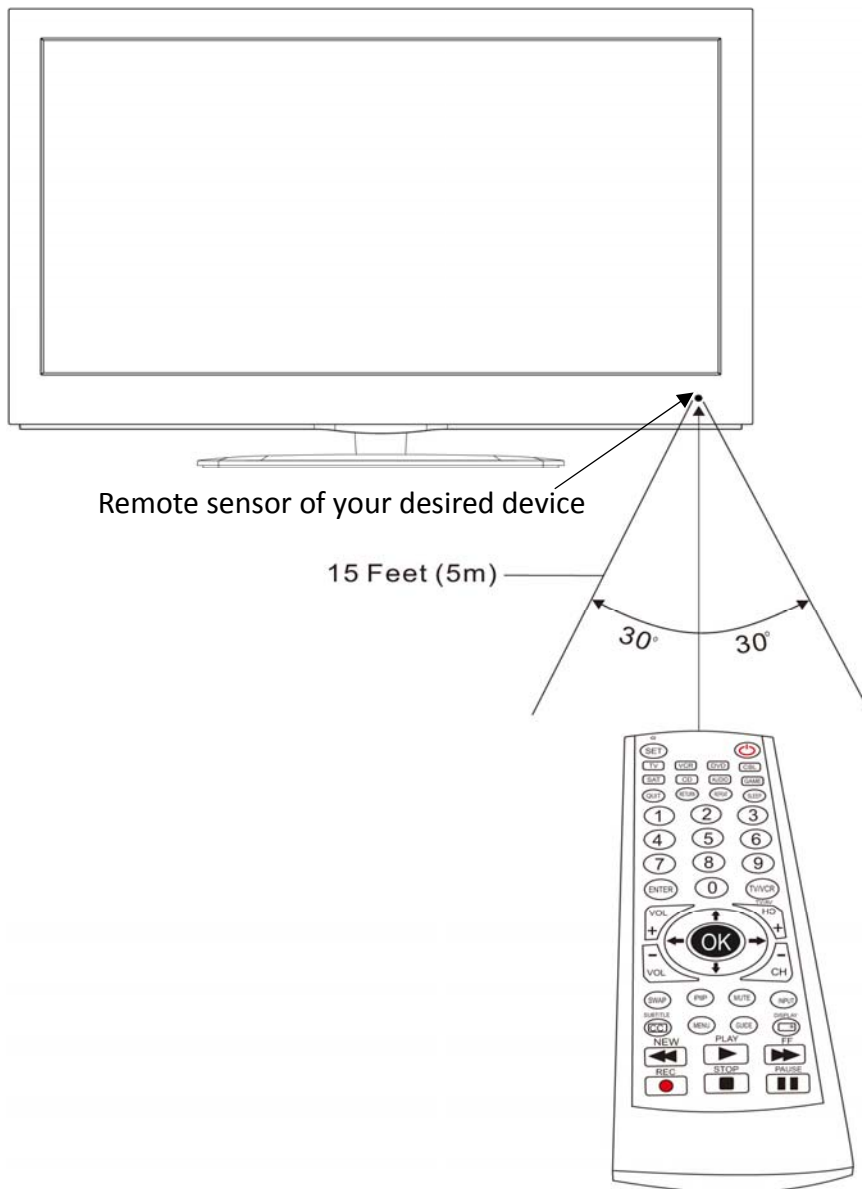

Remarks:

- A. When there is an obstacle between the device and the Universal Remote, the transmitter may not operate.
- B. When in direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote sensor of the device, the remote operation may be unstable.

TROUBLESHOOTING:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	Batteries incorrect installation	Re-install the batteries as the polarity marking inside the battery compartment
	Batteries drained	Replace by new batteries
Not functioning	The Universal Remote had not set or incorrect set	Reset the Universal Remote as instructed earlier

GERNERAL SPECIFICATTIONS:

Power Source: 2 x AAA size batteries (Not included)

Effective Range Approximate 15 feet (5M) in open area

ACCESSORIES:

1 x User's Manual

1 x Remote Code List

LIMITED WARRANTY

Craig Electronics warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit cannot be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc, and Craig Electronics Inc is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: service@craigelectronics.com