

Brand Name Code List

CODE:	Brand of TV:	Brand of VCR/DVD	Brand of SAT/CBL/STB	Brand of AUX/CD/Audio /DVR
1	RCA	RCA	RCA	RCA
2	SONY	SONY	SONY	SONY
3	PHILIPS	PHILIPS	PHILIPS	PHILIPS
4	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG
5	GE	GE	GE	GE
	PROSCAN	PROSCAN	PROSCAN	PROSCAN
			PIONEER	PIONEER
6	Zenith	Zenith	Zenith	Zenith
		APEX	Gemin	TEAC
			JERROLD	NAD
7	MAGNAVOX	MARANTZ	MAGNAVOX	MARANTZ
		MAGNAVOX	TOCOM	MAGNAVOX
			GENERAL	
			INSTRUMENT	
8	PANASONIC	PANASONIC	PANASONIC	PANASONIC
	SHARP	SHARP	SHARP	TECHNICS
	TOSHIBA	TOSHIBA	TOSHIBA	SHARP
	DAEWOO	DAEWOO		TOSHIBA
		YAMAHA		AMAHA
		DENON		DENON
9	HITACHI	HITACHI	HITACHI	HITACHI
	SANYO	SANYO	LG	SANYO
	LG	LG		LG
	JVC	JVC		JVC
	mitsubishi	mitsubishi		mitsubishi
0	SYLVANIA	SYLVANIA	ECHOSTAR	SYLVANIA
	FISHER	FISHER	DISH	EMERSON
	CURTIS-MATHES	CURTIS-MATHES	HUGHES	CURTIS-MATHES
	EMERSON	EMERSON	PRIMESTAR	FISHER
				OPTIMUS
				KENWOOD
				ONKYO

CODE LIST

Brand of TV (Device Selection Buttons: TV Button)	Codes:
ABEX	0120
ADMIRAL	0603,0224,0701
ADVENT	0213,0219,0893
ADVENTURA	0019
AIKO	0407
AIWA	0121,0221,0324,0528
ALLERON	0706
AMARK	0603
AMTRON	0906
AKAI	0112,0801,0309,1315,1415,0027,1112 1912,1515
ANAM NATIONAL	0906,0901,0104,0805,0920
AOC	0002,0102,0502,1502,0003,0217,0119,0320
APEX	0023,0223,0123,1814,0741
ARCHER	0603
ASPECT	0507
AUDIOVOX	0906,1503,1313
AXION	0319,0793
BANG & OLUFSEN	0620
BELCOR	0002
BELL & HOWELL	0704,0506,0601,0701
BENQ	0709,0909,0711,1616
BLUESKY	1117,0016
BRADFORD	0906
BROKSONIC	0316,0115,0626,0327,0632,0041
BROKWOOD	0002
CANDLE	0002,0502,0019,0402
CAPEHART	0119
CCE	1916
CELERA	0023
CELEBRITY	0801
CENTRIOS	0518
CENTURION	0502
CETRONIC	0805
CHANGHONG	0023,0741
CINERAL	0407,0016
CITIZEN	0002,0502,0906,0112,0512,0520,0115 0701,0402,0805,0407
CLAIRTONE	0003
CLASSIC	0023,0741,0805
CLP	0010
CLP CLASSIC	0022,0005,0007
COBY	1710,1014
COLOR VOICE	0602
COLORTYME	0002,0502,0602

CONCERTO	0002,0502
CONCIERGE	0713
CONTEC	0906,0802,0003,0805
CORNEA	0606
CRAIG	0906,0805
CROSLEY	0807
CROWN	0906,0805
CURTIS MATHES	0704,0112,0614,0002,0502,0601,0506 0512,0437,0701,0103
CTX	0603
CXC	0906,0805
CYBERVISION	0016
DAEWOO	0614,0002,0502,0611,0102,0415,0905 0615,0505,0826,0529,0046,0609,0805 0407,0303,0602,0214,0403,0314,0503
DAYTRON	0002,0502
DELL	0522,0404,0814
DIAMOND VISION	0622,0496,0810
DIGIMATE	1303
DIGISTAR	1503,0118,0413,0213,0318,0814,1603 1716,1816
DIMENSIA	0704,0601
DISNEY	0417,0115
DUKANE	0507,0808
DUMONT	0713,0002
DURABRAND	0520,0115,0916,0126,0447,0323,0317 1115
DYNASTY	0805
ELEKTRA	0701
ELECTROBAND	0801,0003
ELECTROHOME	0002,0502,0027,0901,0803
EMERSON	0324,0924,0626,0826,0027,0327,0128 0228,0305,0063,0134,0247,0605,0705 0805,0703,0090,0004,0519,0106,0104 0304,0604,0804,0005,0105
ENVISION	0002,0502,0009,1502
ESA	0520
FISHER	0506,0612,0428,0619,0802
FUJITSU	0321,0706,1202
FUNAI	0706,0520,0906,0324,0247,0805
FUTURETEC	0906,0805
GATEWAY	0206
GE	0704,0312,0018,0002,0502,0006,0007 0601,0835,0901,0114,0103
GIBRALTER	0713,0002
GOLDSTAR	0002,0502,0102,0324,0435,0802,0307 0609,0217
GRADIENTE	1902,0002,0916,1617,1517
GRUNDY	0706,0906
GUESTVISION	0721
GVISION	1102

HAIER	0709,0223,0323,0317,1316
HALLMARK	0002,0502
HARVARD	0906
HEWLETT PACKARD	1103,1002
HITACHI	0410,0507,0815,0607,0808,0002,0502 0710,1801,0701,0802,0707
HISENSE	0908,0819,0223,1203
HYUNDAI	1015
ILO	0421,1608,1004,1903,0216,0520
IMA	0906
INFINITY	0807,0430
IN FOCUS	0601
INITIAL	1608,0216,1110,1512
INSIGNIA	0911,0520,0323,0115,0914,0213,0318 1416,0247,0504
INTEGRA	0719
INTEQ	0713
JANEIL	0019
JBL	0807
JCB	0801
JC PENNEY	0704,0002,0102,0502,0112,0312,0512 0007,0601,0310,0402,0802
JENSEN	0002,0502,0914
JVC	0607,0204,0321,0508,0617,0326,0993 0802,0108,0308,0715
KAWASHO	0002,0502,0801
KAYPANI	0119
KEC	0805,0906
KENWOOD	0002,0502
KLH	0023
KLOSS NOVABEAM	0408,0019
KOGI	1102
KONKA	0906,0702,0203,0306,0208,0911,0842 0942,0504
KTV	0906,0003,0703,0805,0608
KURAZAI	0701
LASONIC	0622,0496
LEGEND	0213
LG	0002,0606,0502,0102,0117,0814,0324 0435,0802,0307,0609,0217
LIQUIDVIDEO	0319,0418,0793
LODGENET	0704,0821,0601,0701
LOEWE	0722,0807
LOGIK	0704,0601,0701
LUCE	0107
LUXMAN	0002,0502
LODGING	2041
LXI	0704,0002,0502,0506,0807,0312,0512 0601,0324,0103
MAGNASONIC	0706
MAGNAVOX	0807,0002,0502,0919,1914,0224,0430

MAGNAVOX	0247,0402,0408,0109,0715
MAJESTIC	0704,0601,0701
MARANTZ	0807,0719,0002,0502
MAXENT	0206
MEDION	0922,0421,0417
MEGATRON	0002,0502,0507
MEI	0003
MEMOREX	0002,0502,0506,0706,0115,0704,0601 1302,0428,0632,0701
MGA	0002,0102,0502,0706,0802,0803,0715,0619
MIDLAND	0704,0713,0007,0312,0103
MINTEK	0216
MINUTZ	0806
MITSUBISHI	0102,0716,0706,0002,0502,0027,0803 0715,0619
MONIVISION	0205
MONTGOMERY WARD	0704,0701,0601
MOTEVA	0506,1902
MOTOROLA	0603,0901
MTC	0002,0102,0502,0112,0512,0003
MULTITECH	0906
MULTIVISION	0010
MYRON & DAVIS	0822
NAD	0002,0502,0512,0120
NEC	0719,0002,0102,0502,0901,0602,0111,0715
NETTV	0206,0014
NEXXTECH	1806,0318
NIKEI	0805
NIKKO	0002,0502,0407
NIKO	1915
NORCENT	0223,0905,0207
NTC	0407
OLEVIA	1304,1802,1615,1815,1217
ONCOMMAND	0721
ONKING	0805
ONWA	0906,0805
OPTIMUS	0618,0120,0039,0739
OPTOMA	1404
OPTONICA	0603,0111
ORION	0713,0115,0105
PANASONIC	0718,0416,0007,0618,0807,0039,0739 0345,0696,0901,0608
PHILCO	0807,0002,0102,0502,0919,0702,1417 0408,0109,0715,0901,0402
PHILIPS	0807,0022,0020,0422,0122,0222,0322 0002,0520,0919,0521,0621,0709,1516 1017,0430,0247,0901,0402,0408,0109 0210,0310,0715
PHILIPS-MAGNAVOX	0807,0022,0322,0919,0224,0430
PILOT	0002
PIONEER	0120,0719,0808,0002,0502,0610,0519

PIVA	1109
PLANAR	1302
POLAROID	0819,0918,0914,1503,1215,0504
PORTLAND	0002,0102,0502,0415,0614
PRECISION	0218
PRICE CLUB	0112
PRIMA	1503,0118,0213,0318,0219
PRINCETON GRAPHICS	0603,0511
PRISM	0007
PROSCAN	0704,0312,0103,0601,0817,0917
PROTON	0820,0002,0502,1602,0910,0119,0220
PROTRON	1303,1317
PROVIEW	1104,1204,1304
PULSAR	0713,0002
QUASAR	0718,0416,0007,0618,0807,0039,0739 0901,0608
RADIO SHACK	0704,0002,0406,0506,0906,0618,0502 0324,0835,0601,0802,0705,0805,0111
RCA	0704,0002,0406,0007,0011,0611,0811 0312,0514,0720,0102,0502,0601,0817 0917,0835,0901,0103,0803,0211,0912 0114,0519,0320,0420
REALISTIC	0704,0002,0406,0506,0906,0618,0502 0601,0324,0802,0705,0805,0111
RHAPSODY	0003
RUNCO	0713,0719,0712
SAMPO	0014,0206,0002,0502,0119,0802
SAMSUNG	0112,0309,0209,0512,0302,0502,0002 0102,0110,0818,0895,0437,0802,0103 0609,0012,0212
SAMSUX	0502
SAMTRON	0112
SANSUI	0115,0632
SANTECA	0021
SANYO	0506,0311,0612,0002,0428,0802,0412,0619
SCEPTRE	0516,1814
SCOTCH	0002,0502
SCOTT	0002,0502,0706,0906,0004,0105,0805
SEARS	0704,0807,0506,0706,0112,0002,0502 0312,0512,0612,0520,0601,0812,0509 0041,0247,0802,0103,0619
SELECTRON	1803,1603,1703
SEMP	1701
SHARP	0509,0913,0907,0603,0002,0502,0224 0228,0202,0111,0813
SHOGUN	0002
SIGNATURE	0704,0601,0701,0903
SIMPSON	0402
SONIC	0003
SONY	0414,0902,0801,0708,0639,0816
SOVA	1901,1111

SOYO	1614,1714
SOUNDESIGN	0002,0502,0706,0906,0402,0805
SPECTRA	0622
SPECTRAVISION	0921
SQUAREVIEW	0520
SSS	0002,0906,0805
STARLITE	0906
STAR SIGHT	0008
SUPRA	0002,0809
SUPERSCAN	0812,0509,0247
SUPERSONIC	0096
SUPREMACY	0019
SUPREME	0801
SVA	0223,0822
SYLVANIA	0807,0002,0502,0115,0520,0919,1715 0324,0247,0447,0402,0408,0109,0715,0717
SYMPHONIC	0906,0520,0324,0247,0004
SYNTAX	1304,1615,1815
TANDY	0603
TATUNG	0709,0421,0901
TECHNICS	0007
TECHWOOD	0002,0502,0007
TEKNIKA	0704,0002,0102,0502,0706,0906,0112 0512,0618,0601,0019,0701,0402,0802,0805
TELECATION	0313
TELERENT	0704,0601,0701
TERA	0002,0220
TEVION	0421
TMK	0002,0502
TOSHIBA	0517,0419,0512,0613,0719,0112,0506 0111,0618,0627,0437,0041,0094,0802 0111,0313,0715
TRUTECH	1504,1116,1713
UNIVERSAL	0806,0310
VICTOR	0607
VIDTECH	0002,0102,0502
VIEWSONIC	0206,0808,1003,1016
VIKING	0019
VIORE	1403
VIZIO	0709,1702,0855,0867,0877,0889
WARDS	0704,0807,0002,0102,0502,0706,0601 0408,0109,0310,0111,0513,0806,0701 0402,0004
WESTINGHOUSE	0915,0013,1216,0300
WHITE WESTINGHOUSE	0611,0614,0415,0215,1402,0324,0529,0609
YAMAHA	0618,0002,0102,0502
ZENITH	0713,0502,0606,0409,0710,0415,0507 0714,0405,0712,0015,0916,0008,0002 0115,0224,0324,0126,0326,0826,0228 0430,0632,0043,0437,0903,0505,0701,0407

Brand of HDTV (Device Selection Buttons: SAT Button)	Codes:
GO VIDEO HDT100	0662
HITACHI 61HDX98B	0864
HUGHES HTL-HD	0362,0864,0765
HUGHES HIRD-E8	0362,0864,0765
LG LSS-3200A	0362,0864,0765
LG HTL-HD	0362,0864,0765
MINIBITS SR-HD5	0864
MINIBITS SRHD400	0864
MINIBITS SRHD500	0864
MOTOROLA HDT100	0463
PHILIPS DSHD800R	0864
PIONEER SH-D505	0062
PROSCAN PSHD105	0265
RCA HD65W20	0467
RCA PSHD105	0265
RCA DTC-100	0265
RCA DTC-210	0265
SAMSUNG SIR-T165	0959
SAMSUNG SIR-T351	0959
SAMSUNG SIR-TS160	0563
SAMSUNG SIR-TS360	0563
SONY SATHD100	0963
SONY SATHD200	0963
SONY SATHD300	0963
SYLVANIA 6900DTD	0759
TOSHIBA DST3000	0362,0765
TOSHIBA DST3100	0362,0765
TOSHIBA DW65X91	0362,0765
ZENITH HDSAT420	0065
ZENITH HDSAT520	0065
ZENITH DTV1080	0065
Brand of SAT (Satellite Receiver; Device Selection Buttons: SAT Button)	Codes:
AMPLICA	0159
BELL EXPRESSVU	0067,0366,0167,0464
CENTURY	0356
CHANNEL MASTER	0359,0459,0559
CHAPPARAL	0657,0757
CHEYENNE	0757
DRAKE	0857,0059,0360
DREAMBOX	0663
DIRECTV	0863,0864,0564,0564,0963,0259,0260 0263,0962,0664,0065,0265,0465,0765 0866,0966,0367,0567,0362,0563,1506 0355,0455,0555
DISH NETWORK	0167,0366,0464,0862,0067,0460,0560,0660
DISHPRO	0460,0560,0660,0067
DX ANTENNA	0458,0859
ECHOSPHERE	0464

ECHOSTAR	0167,0366,0464,0862,0067,0460,0560,0660
EXPRESSVU	0067,0366,0167,0464
FORTECSTAR	0558,0157,0257,0357,0457,0557
FUJITSU	0760,0860
GE	0265,0566,0365,0863,0966,0666,0766,0866
GEMINI	0161
GENERAL INSTRUMENT (GI)	0364,0865,0965,0066,0466,0665,0166,00580 158,0258,0960
GLOBECAST	0956,1306
GO VIDEO	0662
HITACHI	0465,0564,0664,0864,0765,0362
HUGHES NETWORK	0465,0864,0564,0644,0763,0765,0362,0659
JVC	0464,0862
KENWOOD	0461
LG	0362,0864,0765
LUXOR	0561
MAGNAVOX	0259,0862,0565
MACOM	0661
MITSUBISHI	0765,0864,0465,0564,0664,0362
MOTOROLA	0466,0463
NET	0456,0262
NORSTAT	0761
NOVAPLEX	0155
PACE	0063,0163,0266
PANSAT	0060,1406
PANASONIC	0264,0260,0261
PRIMESTAR	0364,0665
PHILIPS	0259,0862,0763,0564,0664,0864,0465 0765,0565,0362,0162
PHILIPS-MAGNAVOX	0259,0862,0565
PIONEER	0062
PROSAT	0957
PROSCAN	0265,0365,0666,0966,0766,0866
RCA	0265,0566,0365,0863,0467,0966,0666 0766,0866,0411
REALISTIC	0961,0358
SAMSUNG	0061,0959,0962,0263,0563,0655
SHARP	0062
SKY NETWORK	0063,0163,0266,0355,0455,0555
SIERRA I II III	0757
SONY	0963,0367,0567,0160,0861
STARCHOICE	0665,0166,0364
STAR SIGHT	0964
STAR TRAK	0462
STS	0458,0658,0758
SUPER GUIDE	0562
SYLVANIA	0759
TELSAT	0356
TOSHIBA	0765,0864,0465,0564,0664,0362,0858 0064,0164,0764
TVA	0756

ULTIMATE TV	0966,0567
UNIDEN	0964,0958,0762
UNITED	0361
VIDEO CIPHER II	0059
VISIONTEC	0856
WEBTV	0862,0160
ZENITH	0363,0065,0267,0161,0266,0857,0059 0360,0165
Brand of STB (Set-Top Box; Device Selection Buttons: SAT Button)	Codes:
Access HD	2001
Artec	2002
CHANNEL MASTER	2003
COSHIP	2004
Digital Stream	2005
GE	2006
Goodmind	2007
Insignia	2008,2022
ZENITH	2008
Lasonic	2009
MAGNAVOX	2010,2011
Philco	2010
Microgem	2012
RCA	2013,2025
Sansonic	2014
Skardin	2015
Zentech	2015
Tivax	2016
Telefonica	2017
Ladtiveworks	2018,2019,2020,2021
APEX	2023
AONI	2028
Brand of DTC (Digital Set-Top-Box ; Device Selection Buttons: SAT Button)	Codes:
ACCESS HD	2053
ALPHA DIGITAL	2053
AMTC	2053
APEX	2054
ARTEC	2055
CADENCE	2056
CHANNEL MASTER	2057
COSHIP	2056
DIGITALSTREAM	2058
DISH NETWORK	2059
EHOSTAR	2059
GE	2060,2073
GRIDLINK	2061
INSIGNIA	2062
KINGBOX	2055
LASONIC	2061

MAGNAVOX	2063
MICROGEM	2064
PHILCO	2063
RCA	2065,2068
SANSONIC	2061
SKARDIN	2066
SUNKEY	2067
TIVAX	2053
VENTURER	2068
WINEGARD	2068
ZENITH	2062
ZENTECH	2066
ZINWELL	2069
AIRLINK	2066
CASTI	2070
DAEWOO	2071
DAYTEK	2070
EVOLUTION	2072
GOODMIND	2073
MEMOREX	2074
SYLVANIA	2075
VENTURA	2068
Brand of Direct TV (Device selection Buttons: SAT Button)	Codes:
DIRECTV (all models except R10)	2076,2077,2078,2079,2080,2081,2082,2083
R10	2096
Hughes Network Systems (most	2088
Hughes Network Systems models GAEBO,,GAEBOA, GCB0,GCEBOA,HBH	1700
GE models GRD33G2A and	2086
Philips models DSX5500 and DSX5400	2084
Proscan models PRD8630A and	2086
RCA models DRDI02RW,DRD203RW,DRD30IRA, DRD302RA,DRD303RA,DRD403RA,DRD 703RA, DRD502RB,DRD 503RB,DRD505RB,	2086
DRD440RE,DRD460RE,DRD480RE,DRD 430RG,DRD431RG,DRD450RG,DRD45IR G, DRD485RG, DRD486RG,	2085
Samsung model SIR – S60W	2091
Samsung models SIR – S70, SIR – 575, SIR – S300W, and SIR – S310W	2090
Sony models (All models except TiVo and Ultimate TV)	2098
Brand of Direct TV HD Receiver (Device selection Buttons: SAT Button)	Codes:
DIRECTV all models	2076,2077,2078,2079,2080,2081,2082,2083
Hitachi model 6IHDX98B	2089
HNS models HIRD – E8, HTL – HD	1800
LG model LSS – 3200A,HTL – HD	1800
Mitsubishi : model SR – HD5	1700,2088

Philips model DSHD800R	1700
Proscan model PSHDI05	2085
RCA models DTC-100, DTC-210	2085
Samsung model SIR-TS360	2097
Samsung models SIR-TS160	2093
Sony models SAT-HD100,200,300	2098
Toshiba models DST-3000,DST-	1700,2094
Zenith models DTVI080,HD-SAT520	1900
Brand of Direct TV DVR (Device selection Buttons: SAT Button)	Codes:
DIRECTV all models	2076,2077,2078,2079,2080,2081,2082,2083
HNS models SD-DVR80,SD-DV40, SD-DVRI20,HDVR2,GXCEBOT, GXCEBOTD	2096
Philips models DSR704,DSR708,DSR6000,DSR600R, DRS70	2092,2096
RCA models DWD490RE,DWD496RG	2095
RCA models DVR39,40,80,120	2096
Sony model SAT-T60	2087
Sony model SAT-W60	2099
Samsung models SIR-S4040R,SIR- S4080R, SIR-S4I20R	2096
Brand of HTIB (Home Theater In a Box; Device Selection Buttons: SAT Button)	Codes:
AIWA	0043,0585
AMW	0493
APEX	0245
BOSE	0868
BOSTON ACOUSTIC	1411
CENTRIOS	1308,1107,0546
CLASSIC	1706
CRITERION	0446
DURABRAND	0546,0142,0279,1510,1610
EMERSON	0695
INSIGNIA	1208
JVC	0098,1511
KLH	0292
KOSS	0143
LENOXX	0794
LG	0898
MAGNAVOX	0193,0598,0277,0442,0277
MYRON & DAVIS	0897
NESA	0897
NEXXTECH	1208,1107,0546
NORCENT	0494
ONKYO	0199
PANASONIC	0099
PHILIPS	0177,1214,0598,0277,0442,0377
PIONEER	0299,0498

RADIO SHACK	0546,0946,0589,0593,0693
RCA	0546,0946,0589,0693
REGENT	0794
RIO	0142,0380
SABA	0593
SAMSUNG	0047,0895,1511
SELECTRON	1409,1909
SONY	0200
TECHWOOD	1708
TEVION	0446
ZENITH	0142,0380
Brand of DVR-SAT (Digital Video Recorder - Satellite Receiver; Device selection Buttons: SAT Button)	Codes:
BELL EXPRESSVU	0366,0167
DIRECTV	1506
DISH NETWORK	0167,0366
DREAMBOX	0663
EHOSTAR	0167,0366
EXPRESSVU	0366,0167
FORTECSTAR	0558,0157,0257
HUGHES NETWORK	0763,0659
RCA	0966
PHILIPS	0763
PROSCAN	0966
SAMSUNG	0959
SONY	0367,0567
ULTIMATE TV	0966,0567
ZENITH	0267
Brand of VCR (Video Cassette Recorder; Device Selection Buttons: VCR Button)	Codes:
ACCELE	0037
ADMIRAL	0224
ADVENTURA	0726
AIKO	0826
AIWA	0126,0324,0528,0726
AKAI	0324,0524,0424,0624,0724,0027,0931,0335
ALLEGRO	0326,0534,0925
AMERICAN HIGH	0830
APEX	0596
ASHA	0037
AT&T	0938
AUDIO DYNAMICS	0239,0339,0025
AUDIOVOX	0126
BELL & HOWELL	0428
BEAUMARK	0037
BROKSONIC	0227,0626,0327,0632,0041,0398,0325,0530
CALIX	0126
CANDLE	0625,0126,0037,0025,0825,0026
CANNON	0124,0830,0535
CAPEHART	0534

CARVER	0330
CCE	0826,0237
CINEVISION	0126
CITIZEN	0625,0126,0826,0037,0025,0825,0026
COLORTYME	0025
COLT	0237
CRAIG	0126,0037,0237,0426
CURTIS MATHES	0124,0330,0324,0035,0037,0437,0025,0526 0830
CYBERNEX	0037,
DAEWOO	0529,0625,0626,0826,0035,0825,0026,0726 0798
DBX	0239,0339,0025
DENON	0132
DIAMOND VISION	0291
DIMENSIA	0124
DURABRAND	0126
DYNATECH	0324,0726
ELECTROHOME	0126,0027
ELECTROPHONIC	0126
EMERSON	0626,0126,0826,0227,0327,0630,0632,0134 0037,0625,0924,0324,0128,0228,0428,0528 0447,0247,0724,0325,0526,0726,0027,0527 0827,0927,0628,0530,0830,0731,0634,0735
FISHER	0032,0428,0328,0330,0025,0426,0928,0029
FUJI	0524,0830
FUNAI	0324,0247,0447,0726
GARRARD	0726
GE	0124,0732,0135,0835,0037,0429,0830
GOLDSTAR	0324,0126,0435,0534,0236,0025
GRADIENTE	0726,0126
GO-VIDEO	0037,0139,0342,0244,0147,0798,0438
HARLEY DAVIDSON	0726
HARLEY DAVIDSON	0726
HARMAN KARDON	0025,0027
HARWOOD	0237
HEADQUARTER	0428
HITACHI	0538,0324,0336,0931,0834
HI-Q	0426
INFINITY	0430
INSIGNIA	0126,0392
INSTANT REPLAY	0324,0830
INTEQ	0126
JC PENNEY	0124,0126,0428,0037,0538,0239,0339,0830 0931,0834,0935,0025
JCL	0830
JENSEN	0538,0931
JVC	0239,0339,0428,0326,0443,0691,0025,0931
KENWOOD	0428,0239,0339,0025,0931
KLH	0237
KODAK	0126,0830
LG	0324,0534,0435,0392
LITEON	1508
LLOYD	0324,0726
LOGIK	0237
LXI	0324,0126

MAGNAVOX	0330,0430,0534,0324,0224,0124,0230,0125 0247,0093,0598,0830
MAGNIN	0037
MARANTZ	0330,0428,0239,0339,0530,0830,0535,0025
MARTA	0126
MATSUSHITA	0830
MEDION	0291
MEI	0830
MEMOREX	0330,0126,0428,0032,0632,0534,0037,0224 0324,0335,0426,0726,0830
MGA	0630,0027
MGN TECHNOLOGY	0037
MIDLAND	0429
MINOLTA	0538,0834
MITSUBISHI	0630,0431,0538,0239,0339,0131,0027
MONTGOMERY WARD	0224,0631
MOTOROLA	0224,0830
MTC	0324,0037,0726
MULTITECH	0324,0037,0726,0429,0237
NEC	0428,0239,0339,0530,0731,0831,0931,0025 0526
NEXXTECH	0334,0546,0596
NIKKO	0126
NOBLEX	0037
OLYMPUS	0830
OPTIMUS	0525,0037,0937,0126,0737,0039,0739,0224
OPTONICA	0037,0631
ORION	0227,0632
PANASONIC	0937,0739,0039,0938,0124,0345,0830
PENTAX	0538,0025,0834
PHILCO	0330,0124,0125,0830
PHILIPS	0330,0430,0036,0136,0738,0439,0939,0247 0230,0830
PHILIPS-MAGNAVOX	0330,0430,0224
PILOT	0126
PIONEER	0132,0538,0239,0339,1010,0935
POLAROID	0596
PORTLAND	0825,0026
PROSCAN	0124,0432
PROTEC	0237
PULSAR	0534
QUARTER	0428
QUARTZ	0428
QUASAR	0937,0039,0124,0739,0830
RADIO SHACK	0124,0224,0324,0525,0126,0428,0835,0037 0737,0937,0426,0726,0027,0029,0830,0631 0335
RADIX	0126
RANDEX	0126
RCA	0124,0126,0432,0532,0732,0832,0932,0033 0133,0233,0135,0835,0037,0538,0424,0429 0830,0834
REALISTIC	0124,0224,0324,0126,0428,0037,0737,0937 0426,0726,0027,0029,0830
REPLAYTV	0938
RICOH	0936

RIO	0126,0142
RUNCO	0534
SAMSUNG	0037,0437,0625,0538,0147,0895,0997,0624 0335
SAMTRON	0139
SANKY	0224,0534
SANSUI	0632,0239,0339,0041,0227,0398,0931
SANYO	0824,0032,0328,0428,0037,0426
SCOTT	0625,0626,0327,0630,0735,0325,0927
SEARS	0937,0126,0428,0330,0538,0041,0247,0426 0928,0029,0830,0834,0935
SHARP	0637,0737,0224,0324,0228,0825,0027,0631
SHINTOM	0524,0936,0538,0237,0337
SHOGUN	0037
SIGNATURE	0324
SINGER	0830,0237
SONIC BLUE	0938
SONY	0539,0034,0524,0933,0936,0540,0838,0038 0138,0238,0639
STS	0538,0830,0834
SUPERSCAN	0247
SYLVANIA	0324,0330,0630,0124,0247,0726,0830,0225 0447,1212
SYMPHONIC	0324,0225,0247,0726
TANDY	0324,0428
TASHIKO	0126
TATUNG	0931
TEAC	0324,0726,0931
TECHNICS	0830
TECHWOOD	1708
TEKNIKA	0324,0126,0134,0726,0830
TiVo	0738,0838
TMK	0037,0526,0731
TOSHIBA	0625,0727,0627,0330,0630,0437,0053,0094 0441,0029,0735
TOTEVISION	0126,0037
TRUTECH	0798
UNITECH	0037
VECTOR RESEARCH	0625,0239,0339,0025
VICTOR	0239,0339
VIDEO CONCEPTS	0625,0239,0339,0025,0027
VIDEOSONIC	0037
WARDS WARDS	0124,0224,0324,0625,0126,0037,0538,0426 0726,0027,0830,0631,0234, 0834,0735,0237
WHITE WESTINGHOUSE	0324,0529
XR-1000	0726,0830,0237
YAMAHA	0025,0931,0239,0339
ZENITH	0534,0326,0826,0228,0430,0224,0324,0435 0336,0936,0437,0126,0524,0632,0824,0239 0339,0529,0438,0925,0430,0224,0324,0435 0336,0936,0437,0126,0524,0632,0824,0239 0339,0529,0438,0925
Brand of DVR CABLE (Device Selection Buttons: VCR Button)	Codes:
CABLEVISION	0252
ILLICO	0252

PIONEER	0252
RCN	0954
ROGERS	0252
SCIENTIFIC ATLANTA	0252
TIME WARNER	0252
VIDEOTRON	0252
Brand of TV-VCR (Device Selection Buttons: VCR Button)	Codes:
ADMIRAL	0224
AIWA	0324,0528
AKAI	0027
BROKSONIC	0632,0316,0626,0316,0327
CURTIS MATHES	0437
DAEWOO	0505,0826,0415,0529
DIAMOND VISION	0810,0291
DURABRAND	0916,0126
ELECTROHOME	0027
EMERSON	0027,0324,0924,0128,0228,0632,0134 0505,0826,0316,062
FISHER	0428
FUNAI	0324
GE	0835
GOLDSTAR	0324,0435
GRADIENTE	0916,0126
HITACHI	0324
JVC	0326
INFINITY	0430
LG	0324,0435
LXI	0324
MAGNAVOX	0224,0430,0247
MEMOREX	0428,0632
MINISUBISHI	0027
PANASONIC	0039,0739
PHILIPS	0430,0247
PHILIPS-MAGNAVOX	0224,0430
OPTIMUS	0039,0739
OUASAR	0039,0739
RADIO SHACK	0324,0835
RCA	0835
REALISTIC	0324
SAMSUNG	0437,0895
SANSUI	0632
SANYO	0428
SHARP	0224,0228
SONY	0639
SYLVANIA	0324
SYMPHONIC	0324
TOSHIBA	0627,0437
WHITE WESTINGHOUSE	0324,0415,0529
ZENITH	0224,0324,0326,0228,0430,0632,0435 0437,0916,0126,0505,0826,0415,0529

Brand of DVD-VCR (Device Selection Buttons: VCR Button)	Codes:
ALLEGRO	0142,0126
APEX	0596
BROKSONIC	0041,0398
CINEVISION	0142,0126
DAEWOO	0798
DIAMOND VISION	0291
DURABRAND	0142,0126
EMERSON	0247,0447,0324
FISHER	0243,0328
FUNAI	0247,0447,0324
GO-VIDEO	0342,0244,0147,0798
HITACHI	0543,0324
INSIGNIA	0142,0126,0392
JVC	0443,0691
LG	0392
LITEON	1508
MAGNAVOX	0247,0093,0230,0598,0230
MEDION	0291
NEXXTECH	0596,1907,0546,0334
PANASONIC	0345
PHILIPS	0247,0598,0230
PIONEER	1010
POLAROID	0596
RCA	0542,0124
RIO	0142,0126
SAMSUNG	0147,0997
SANSUI	0041,0398
SANYO	0243,0328
SEARS	0041
SONY	0540
SYLVANIA	0447,0225,1212,0247,0447,0324
SYMPHONIC	0247,0447,0324,0591,0225
TECHWOOD	1708
TOSHIBA	0094,0441
TRUTECH	0798
WHITE WESTINGHOUSE	0447,0324
ZENITH	0142,0126
Brand of DVD (Device Selection Buttons: DVD Button)	Codes:
ACESONIC	1513
ADVENT	0893
AFREEY	0343
AIWA	0043
AKAI	0141,0145,1112,1912
ALLEGRO	0126,0142
AMES	0744
AMW	0393,0493
ANABA	0797

APEX	0240,0640,0740,0840,0044,0644,0245 0545,0146,0347,0547,0495,0992,0741 0596
ASPIRE	0994
ASTAR	1910
A-TREND	0940
AUDIOVOX	0793,1313
AXION	0793
B & K	0499
BLAUPUNKT	0644
BLUESKY	0143,0146,1114
BODYSONIC	0343
BOSE	0868
BOSS	0792
BOSTON ACOUSTIC	1411
BRITANIA	0833
BROKSONIC	0894,0398,0041
CAVS	1113
CENTRIOS	0796,1308,1408,0793,1007,1107,1507 1607,1707,1008,1108,1807,0546
CHANGHONG	0741
CINEVISION	0142
CITECH	1908
CITIZEN	1908
CLASSIC	0744,1706,0741
COBY	0294,0296,0396,0293,0146,0494,0091 1710,1711,1712,1812,1014
CONCEPT	0644
CONIA	0146
CRITERION	0446
CURTIS INTERNATIONAL	0594,0494
CYBERHOME	0940,0100,0595
CYBERVISION	0433
CYTRON	0246,0440
DAEWOO	0645,0745,0046,0798,0198
DENON	0641,0743
DENZEL	0444
DESAY	0497
DIAMOND VISION	0496,0890,0291
DIGIX	0095
DIGITREX	0146
DISNEY	0447
DRIVE	1011
DUAL	0346,0000,0297,0444,0246,1810
DURABRAND	0546,0142,0246,1210,1310,1410,1510 1610
DVD 2000	0841
EIGERVISION	1213
ELTA	0045,0145
EMERSON	0142,0695,0591,0247,0447
ESA	0297
FARENHEIT	0697

FISHER	0243
FUNAI	0247,0447,0591
GE	0542,0644
GOLDSTAR	0142
GO-VIDEO	0744,0395,0798,0047,0891,0791,0342 0244,0147
GPX	0295,0096
GRADIENTE	0143,0633,0733
GREENHILL	0644
HAAZ	0746,0846
HAIER	0195
HARMAN KARDON	0344
HITACHI	0042,0342,0444,0543,0340
HITEKER	0146
HUMAX	0892
ILO	0597,1608
INFINITY	0343
INSIGNIA	0142,0247,0793,0644,0192,0392
INITIAL	0644,1608,1110,1512
INTEGRA	0843
JBL	0344
JVC	0441,0242,0442,0098,0691,1808,0443 0993
JWIN	0640,0990,0191,1412
KAWASAKI	0196,0546
KENWOOD	0641,0544
KISS	0444
KLH	0644,0292,0240
KONKA	0642,0742,0842,0942,0192
KOSS	0143,0440
KXD	0091
LASONIC	0746,0496
LENOXX	0794,0145,1310,1410
LG	0142,0898,0392
LINN	0945
LITEON	0899,0891,0491,0597,1508
LIQUIDVIDEO	0793
MAGNAVOX	0441,0442,0447,0599,0799,0699,0247 0193,0093,0598
MARANTZ	0441,0142,0442,0943,0799
MAXENT	0993,0991
MEDION	0792,0246,0991,0291,0597
MEMOREX	0246,1606,1413,1913
MERIDIAN	0441
MICROSOFT	0542
MICROVISION	0792
MINTEK	0644
MITSUBISHI	0841
MUSTEK	0744
MYRON & DAVIS	0897
NAD	0142,0944
NAKAMICHI	0844

NEC	0142
NESA	0644,0897
NEXXTECH	0896,0097,0197,0297,0095,1806,1007 1107,1207,1307,1907,1008,0546,0596
NORCENT	0294,0899,0394,0194,0494
ONKYO	0441,0843,0199
OPTIMUS	0042,0941
ORION	0041
ORITRON	0143,1607
PANASONIC	0241,0641,0099,0698,0345,0696,0340
PACIFIC	0246
PHILCO	0533
PHILIPS	0441,0442,0943,0177,0599,0799,0699 0247,0447,0598,1211,1214
PHILIPS-MAGNAVOX	0441,0442,0943,0599,0699
PIONEER	0941,0042,0299,0399,0498,0592,1010
PIVA	1109
POLAROID	0140,0397,0596,1813
POLK AUDIO	0441,0442,0799
PORTLAND	0145,0896
POWER ACOUSTIK	1312
PROLINE	0143
PROSCAN	0542,0690
PROSONIC	0294
PROTRON	0194
PYLE	0692
RADIO SHACK	0546,0946,0593,0693
RCA	0542,0143,0644,0546,0946,0693,0690 1913
REGENT	0794,1210
REOC	0746
RIO	0142
RJ TECHNOLOGY	1209,1311
ROSEN	0694
ROTEL	0242
SABA	0593
SAMSUNG	0342,0047,0895,0997,0790,1511,0147
SAMPO	0343
SANSUI	0041,0398
SANYO	0092,0546,0243
SEARS	0041,0247
SEG	0444
SELECTRON	1309,1409,1509,1609,1709,1809,1909
SEMP	0440
SHARP	0341,0391,0492
SHERWOOD	0144
SHINCO	0644
SHINSONIC	0644
SONIC BLUE	0395
SONY	0300,0400,0500,0541,0200,0540
SOUNDSTORM	0692,0792
SOVA	1111

SUNGALE	0996,0396
SUPERSCAN	0247
SUPERSONIC	0096
SV2000	0247
SVA	0146,0492
SYLVANIA	0247,0447,1212,0591
SYMPHONIC	0247,0447,0591
TASCAM	0242
TEAC	0042,0546,0142
TECHNICS	0641
TECHWOOD	0944,1708,0442
TERAPIN	0995
TEVION	0440,0246,0346,0446,0646,0746,0846
THETA DIGITAL	0042
TIVO	0892,0592
TOSHIBA	1612,1013,1613,0441,0998,0094,0999
TREDEX	0795
TRUTECH	1906,0798,1713
UNITED	0546
VENTURER	0546
WHARFEDALE	0845,0343
WESTINGHOUSE	0300
WHITE WESTINGHOUSE	0447
X-BOX	0542
XENIUS	0440
YAMAHA	0641,0643,0599,0699,0442
YAMAKAWA	0445,0444,1407
ZENITH	0441,0142,0392
Brand of DVD-Recorders+RW (Device Selection Buttons: DVD Button)	Codes:
APEX	0495
ASPIRE	0994
BROKSONIC	0398
CENTRIOS	0796,1607,1707
COBY	0091
CYBERHOME	0595
EMERSON	0591
GO-VIDEO	0744,0891,0791
HITACHI	0543,0340
HUMAX	0892
ILO	0597
INSIGNIA	0392
JVC	0691,1808
KXD	0091
LG	0392
LITEON	0891,0491,0597
MAGNAVOX	0599,0699
MEDION	0991,0597
MEMOREX	1606,1413
MUSTEK	0744
ORITRON	1607

PANASONIC	0340
PHILIPS	1211,0599,0699
PHILIPS-MAGNAVOX	0599,0699
PIONEER	0399,0592,1010
POLAROID	0140
RCA	0542
SAMSUNG	0790
SANYO	0092
SELECTRON	1609
SHARP	0391
SONY	0300,0400,0500
SYLVANIA	1212,0591
SYMPHONIC	0591
TRUTECH	1906
TOSHIBA	0998,0441,1013
YAMAHA	0599,0699
ZENITH	0392
Brand of TV-DVD (Device Selection Buttons: DVD Button)	Codes:
ADVENT	0893
AKAI	1112,1515,1912
APEX	0023,0741
AUDIOVOX	1313
AXION	0319,0793
BROKSONIC	0041
COBY	1710,1014
CHANGHONG	0023,0741
CLASSIC	0023,0741
DAEWOO	0615,0046
DIAMOND VISION	0622,0496,0810,0291
DURABRAND	0916,0142
EMERSON	0247
FUNAI	0247
GPX	0096
HAIER	0195
ILO	1608,1515,1912
INITIAL	1608,1110,1512
INSIGNIA	0247,0504,0192
JVC	0993
KAWASAKI	0196
KONKA	0842,0942
LASONIC	0622,0496
LIQUIDVIDEO	0319,0793
MAGNAVOX	0247
MEMOREX	0041
NEXXTECH	1806
PANASONIC	0345,0696
PHILIPS	0247,0520,0447
PIVA	1109
SAMSUNG	0895
SANSUI	0041

SEARS	0041
SOVA	1901,1111
SUPERSONIC	0096
SYLVANIA	0247,0520,0447
SYMPHONIC	0247
TOSHIBA	0041,0094
TRUTECH	1713
WESTINGHOUSE	1216,0300
Brand of TV-VCR-DVD (Device Selection Buttons: DVD Button)	Codes:
BROKSONIC	0894
DIAMOND VISION	0810,0291
MAGNAVOX	0247
PANASONIC	0345
PHILIPS	0247
SAMSUNG	0895
SEARS	0247
SUPERSCAN	0247
SYLVANIA	0247
TOSHIBA	0094,
Brand of DVR-DVD (Device Selection Buttons: DVD Button)	Codes:
HUMAX	0892
ILO	0597
JVC	1808
LITEON	0597
MEDION	0597
PANASONIC	0340
PIONEER	0592,0399
POLAROID	1813
SONY	0300,0400,0500
TWO	0892,0592
TOSHIBA	0999,0998,1013
Brand of CD (Device Selection Buttons: CD Button)	Codes:
ADC	0490
ADCOM	0767,0073
AIWA	0967,0372,0885
AKAI	0173,0375,0684
AUDIO TECHNICA	0168
CALIFORNIA AUDIO LABS	0273
CAPETRONIC	0568
CARVER	0268,0368,0468,0184
CASIO	0379
CENTRIOS	0979
CITIZEN	0284
CURTIS MATHES	0379
DENON	0668
EMERSON	0767,0968
FISHER	0368,0169,0269,0369,0473
GENEXXA	0968,0469,0573
GOLDSTAR	0673

HARMAN KARDON	0669,0770
HITACHI	0469
INKEL	0769
INSIGNIA	0578
JC PENNEY	0670,0379
JVC	0869,0982
KENWOOD	0569,0969,0170,0374,0474,0484
KRELL	0268
KYOCERA	0490
LUXMAN	0270,0370,0574,0475
LXI	0379
MAGNAVOX	0268,0774,0681
MARANTZ	0268,0470,0570,0874
MCS	0670,0379
MGA	0770
MISSION	0268
MINIBITS	0770,0870
NAD	0773,0975
NAKAMICHI	0970,0071,0784
NEC	0670
NEXXTECH	0679,0879,0480,0580,0584,0087,0787
NIKKO	0168,0968,0269
NSM	0268
ONKYO	0171,0271,0873,0782
OPTIMUS	0368,0468,0469,0569,0371,0471,0571 0671,0076,0376,0776
PANASONIC	0273,0974,0675,0683,0887
PHILIPS	0268,0774,0184
PIONEER	0469,0771,0871,0573,0676,0385,0289
PROTON	0268
RCA	0767,0368,0971,0973,0676,0181,0086 0988,0089,0289
REALISTIC	0767,0368,0568,0968,0469,0570,0371 0571
ROTEL	0268
SAE	0268
SAMSUNG	0775
SANSUI	0268,0072,0973,0075
SANYO	0368,0172,0473,0175,0875
SCOTT	0767,0968
SEARS	0569,0570,0379
SHARP	0569,0570
SHERWOOD	0769,0570,0471,0272,0587
SHURE	0670
SONY	0372,0880,0081,0681
STS	0490
SYLVANIA	0268
SYMPHONIC	0572
TEAC	0269,0570,0571,0572,0672,0772,0287
TECHNICS	0273,0974,0683,0887
THETA DIGITAL	0774
TOSHIBA	0773

VICTOR	0869
YAMAHA	0168,0872,0972,0074,0286
ZENITH	0269,0674,0577,0080,0686
Brand of AUDIO (Device Selection Buttons: Audio Button)	Codes:
AIWA	0585,0885,0786,0687
APEX	0245
APPLE IPOD	0190
BOSE	0868,0079,0179
CARVER	0184
CENTRIOS	1107,0087
CITIZEN	0284
CRITERION	0446
DENON	0981,0383,0886
DELPHI	0472
FISHER	0083,0783
GOLDSTAR	0278
HARMAN KARDON	0082,0483
IPOD	0090
JVC	0680,0982,0583
KENWOOD	0969,0482,0283,0484,0884,0588
KOSS	0143
MAGNAVOX	0281,0083,0193,0277
MARANTZ	0470,0084
MITSUBISHI	0389
NAD	0773,0575,0975
NEO	0174
NEXXTECH	1107,0679,0879,0480,0580,0584,0087 0787
NORCENT	0494
ONKYO	0182,0782,0882,0199
OPTIMUS	0368,0376,0476,0576,0776,0876,0077 0980
PANASONIC	0780,0682,0183,0983,0987,0088,0099 0696
PHILIPS	0177,0083,0983,0084,0184,0277,0377
PIONEER	0385,0288,0388,0489,0299
RADIO SHACK	0272,0077,0980,0282,0188,0288,0388 0488,0189,0489,0589
RCA	0373,0274,0878,0779,0181,0384,0186 0288,0388,0688,0788,0888,0189,0489 0589,0546,0693
REALISTIC	0883
RIO	0142,0380
SABA	0593
SAMSUNG	0047
SANYO	0172
SCOTT	0478
SHARP	0768,0070,0582
SHERWOOD	0272,0282,0487,0587
SIRIUS	0276,0070

SKYFI	0174
SONY	0933,0479,0579,0180,0381,0481,0581 0984,0085, 0185,0285,0985,0200
TAO	0174
TEAC	0672,0382,0187,0287,0387
TECHNICS	0780,0682,0183,0983,0987,0088
TEVION	0446
VENTURER	0176
XM RADIO	0472,0174
YAMAHA	0781,0881,0485,0685,0785,0286,0386 0486,0586,0378
ZENITH	0269,0674,0576,0577,0178,0278,0080 0083,0380,0686,0142
Brand of Smart Home (Device Selection Buttons: Audio Button)	Codes:
GE HOMEMINDER	0201
HOME AUTOMATION	0401
LUTRON	0390
X-10(NEC)	0501
Brand of DVR (Device Selection Buttons: Audio Button)	Codes:
AT&T	0938
HUGHES	0659
HUMAX	0892
PANASONIC	0938,0340
PHILIPS	0738,0036,0136
PIONEER	0592,0399
POLAROID	1813
RCA	0542
REPLAYTV	0938
SONIC BLUE	0938
SONY	0838,0367,0537,0300,0400,0500
TiVo	0738,0838,0036,0136,0367,0999,0892 0592
TOSHIBA	0999
Brand of Laser Disc (Device Selection Buttons: Audio Button)	Codes:
DENON	0132
PIONEER	0132
PROSCAN	0432
RCA	0432
SANYO	0824
SONY	0933
ZENITH	0824
Brand of Game Console (Device Selection Buttons: Game Button)	Codes:
ACER	2033
ARPHONE	2032

DESMET	2032
MEDIACOM	2034
PANTHER	2035
PHILBIX	2032
MICROSOFT	2031,2036,2037,2038,2039,2040
Brand of Cable (Device Selection Buttons:CBL Button)	Codes
ABC	0747,0947,0048,0148,0248
ADELPHIA	0852,0752
ALLEGRO	0054,0154
AMERICAST	0354
ANTRONIX	0448,0548
ARCHER	0448,0548,0648,0748
AT&T	0752
BELL SOUTH	0354
CABLETENNA	0448
CABLEVIEW	0448
CABLEVISION	0252
CENTURY	0748
CITIZEN	0748
COGECO	0752
COLOR VOICE	0848,0948
COMCAST	0752
COMTRONICS	0049,0149
CONTEC	0249
DIGITAL MUSIC EXPRESS	0053
EASTERN	0349
EVERQUEST	0049
GARRARD	0748
GC ELECTRONICS	0548
GEMINI	0255,0549
GE	0556
GENERAL INSTRUMENT (GI)	0552,0747,0148,0752,0952,0453,0654 0754,0053,0048,0947
HAMLIN	0747,0649,0749,0849
HITACHI	0947
ILLICO	0252
JASCO	0748
JERROLD	0552,0747,0148,0453,0947,0048,0653 0254
MAGNAVOX	0150
MEMOREX	0250
MOTOROLA	0552,0148,0952,0453,0654,0754,0048 0752,0254,0947
MOVIE TIME	0350
NOWTV	1106
NSC	0350
OAK	0249,0550
PACE	0854
PANASONIC	0647,0452
PARAGON	0250,0450

PHILIPS	0748,0549,0150,0650,0750,0850
PHILIPS-MAGNAVOX	0152,0055
PIONEER	0449,0252,0950,0051
PULSAR	0250
RADIO SHACK	0152,0055,0154
RCA	0647,0748,0352
RCN	0954
REALISTIC	0548
REGAL	0849
REGENCY	0349
REMBRANDT	0947
ROGERS	0252
RUNCO	0250
SAMSUNG	0049,0051
SCIENTIFIC ATLANTA	0451,0351,0252,0155,0852,0248,0251 0117,0127,0129,0130,0137,0151,0153 0156,0162,0179
SHAW	0752
SIGNAL	0049
SIGNATURE	0947
SL MARX	0049
SPRUCER	0647
STANDARD	0551
STARCOM	0747,0453
STARGATE	0049
STAR SIGHT	0352
STAR TRAK	0253
TANDY	0651
TELEVIEW	0049
TEXSCAN	0551
TIME WARNER	0252
TOCOM	0048,0751,0952,0653
TOSHIBA	0250
TV86	0350
UNIKA	0448,0548,0748
UNITED CABLE	0747
UNIVERSAL	0448,0548,0648,0748,0851,0054
VIDEOWAY	0052
VIDEOTRON	0252
VIEWSTAR	0149,0150,0350,0651
VIDEO TECH	0656
VISIONETICS	1206
ZENITH	0951,0154,0748,0250,0753,0853,0953
ZENITH NETWORK	0354