# **MAGNAVOX**


# **3D VIRTUAL REALITY HEADSET**

**OWNER'S MANUAL** 

MODEL: MC338

## **Quick Start Guide**

1. Remove the VR headset from the packaging, then remove the cell phone holder by sliding it to the right (figure as below #4)

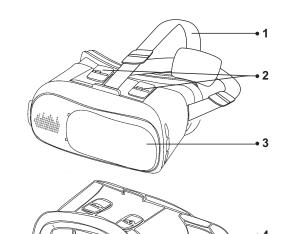


- 1.Adjustable Belt
- 2. Focal Distance Adjust Knob
- 3.Front Panel
- 4.Cell Phone Holder
- 5.Optical Lens

- 2. Using your smartphone, you can access VR content via a choice of apps such as:
- a. YouTube search by using keywords "VR movie", "VR video" or "3D video".
- b. Google Cardboard official VR app from Google, available on Google Play store and Apple App store
- c. Apple App store If you are using iPhone, you can search for "VR movie", "VR video " or "3D video " in app store to find VR related app, game or content.
- d. Google Play store If you are using Android smartphone, you can search for "VR movie", "VR video" or "3D video" in app store to find VR related app, game or content
- 3. Once you find VR content, play it on your smartphone and insert cell phone holder back to the VR headset.
- 4. Adjust the length of the belt for a comfortable fit.



### **LOCATION OF CONTROL**

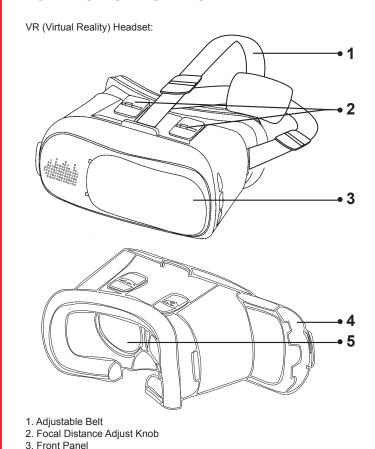

**OPERATION** 

Games into your cell phone.

Games apps in your cell phone.

 
Slide the Movable Holder upward as the illuminate follows:

1. Download and installed the desired VR (Virtual Reality) Video Players;


2. Turn on and enter to the desired VR (Virtual Reality) Video Players;

Detach off the Cell Phone Holder by side it to left as the illuminate


3. Install your cell phone to the VR Headset as follows:



 
C. Place the cell phone into the Cell Phone Holder then release the Movable Holder. (Use the supplied rubber pads to protect your phone if



D. Replace the Cell Phone Holder into the VR Headset as the illuminate

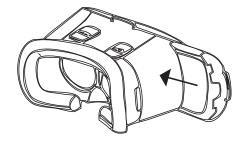


E. Connect your earphone to the cell phone as the illuminate follows:

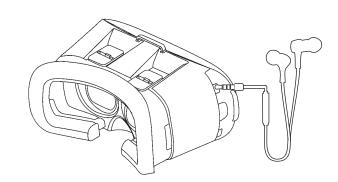


F. Adjust the length of the Adjustable Belt as desire then wear the VR Headset to your head.


- G. Slide the Focal Distance Adjust Knobs to front or rear to adjust focus; slide to left and right to adjust the distance between eyes as desired.
- Slide the Focal Distance Adjust Knobs left and right to adjust the distance

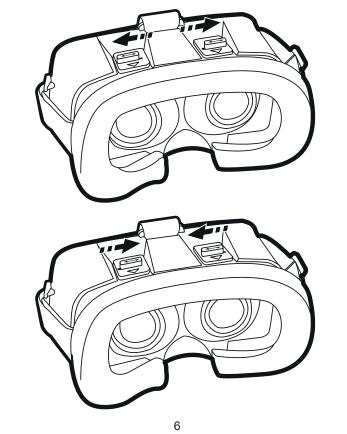

• Slide the Focal Distance Adjust Knobs front and rear to adjust the distance

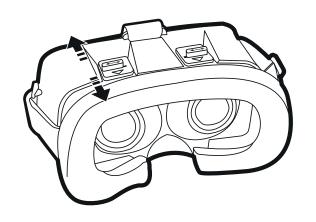

4. If your cell phone equipped a built in Gyroscope Sensor, and the installed apps supported it. You can oscillation the VR Headset during layback/playing to got the specially effects

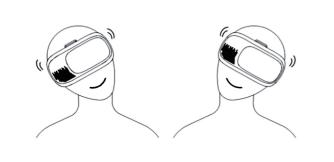

5. If your cell phone becomes warm or hot after long time playing. Slide the Front Panel to right for ventilate as the illustrated below



4. Cell Phone Holder

5. Optical Lens

#### Care & Maintenance

- Keep the lenses clean and protect them from getting scratched. If the lenses get dirty or steam up. Clean them with the lens cleaning cloth, or use water or
- To clean the cabinet, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the cabinet.
- If you use a chemical-saturated cloth to clean the unit, follow that product's instructions.

#### **Accessories:**

- 1 x User's Manual 1 x Dry Cloth
- 3 x Rubber Pads

**SPECIFICATION AND ACCESSORIES ARE** SUBJECT TO CHANGE WITHOUT NOTICE

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$3 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

> Craig Electronics Inc. 1160 NW 163 Drive Miami, FI 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig Electronics Inc. service center. d) Damaged

anyone other man an authorized Chaig Electronics Inc. service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc., and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product

Printed in China

MC338\_WC\_E0FF1\_B0WU

5