

MAGNAVOX

BLEND WIRELESS

Folding Studio Headphones

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MBH542

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on the circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:


To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

1

Location of Controls

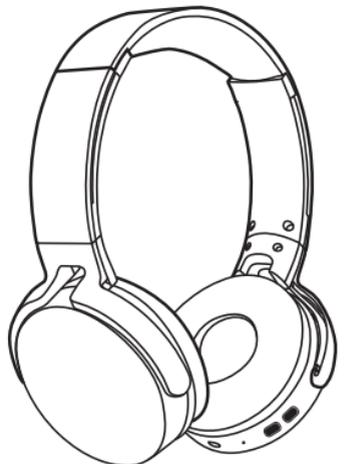

1. Power Button
2. Micro USB Port (For Charging Only)
3. LED Indicators
4. AUX (In) Jack
5. Microphone
6. +VOLUME Button
7. -VOLUME Button

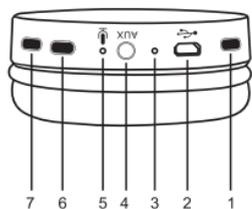

2

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

1. Connect the small plug from the supplied USB Connection Cable to the Micro USB Port.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Charging Indicator on the unit will illuminate. When charging is complete, the indicator will turn off.

NOTES:

- Your battery will last longer if you following these simple guidelines for caring and storing:
- A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
 - B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).
 - C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery fully drains will damage battery. Battery life will be extended if you keep the battery fully charged.
 - D. Battery life naturally shortens slowly over time.
 - E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION

For first time use or re-pairing the unit to a new BT Device, pairing it as below:

1. Press and holding the Power Button approximately 3 seconds to power on the unit. The Blue & Red Indicators will illuminate & blink.
2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device. When paired, the Blue LED Indicator will stop blinking and Red LED Indicator will turn off.
3. If pairing is complete you may now play music and answer the phone with your external BT Device.

3

4. During playback:

- The Blue LED Indicator will start blinking.
 - Press the Power Button to pause; press again to resume normal playback.
 - Press and holding the +VOLUME or -VOLUME Buttons to adjust volume level as desired.
 - Press and release the +VOLUME or -VOLUME Buttons repeatedly to skip tracks.
5. If the unit is paired to a Cell Phone and a call is incoming during an active music session:
 - Press the Power Button then speak to the Microphone to answer the call. When your call is complete, press the Power Button to disconnect or end the call and resume to music playback.
 - Or, press and holding the Power Button approximately 1 second to decline the incoming call then resume to music playback.
 6. When finish listening, press and holding the Power Button approximately 3 seconds until the Blue Indicator not light.

Notes:

- When the external BT Device searched the unit, our model number "MBH542" will appear on the display of external BT Device.
- If while pairing you are asked for a code please try "0000" or "1234".

Normal operation after paired:

1. Power on the external BT Device and enter to BT mode.
2. Press and holding the Power Button approximately 3 seconds to power on the unit. The Blue & Red Indicators will illuminate & blink.
3. Wait a few seconds until the unit automatically pair to the BT Device. When paired, the Blue LED Indicator will stop blinking and Red LED Indicator will turn off.
4. If pairing is complete you may now play music and answer the phone with your external BT Device.

4

AUX (In):

Listen music through the Aux Out; Line Out or Phone Jack from external audio player:

1. In power off mode, connect one end of the supplied Audio Connection Cable to the AUX (In) Jack on the unit.
2. Connect the other end to the Aux Out; Line Out or Phone Jack on external audio player.
3. Play the music on the external audio player as usual.
4. Use the Volume controls on the external audio player to adjust volume level as desired.

Note: If the Audio Connection Cable is inserted into the AUX (In) Jack, BT will be automatically shut off. Unplug the cable from the jack before use BT.

TROUBLESHOOTING

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 3
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume by press and holding the +VOLUME Button on the unit
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by press and holding the -VOLUME Button on the unit
	Volume level of the paired/connected device too high	Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 3-4
	The external BT device too far from the unit	Place the external BT device close to the unit
	Audio Connection Cable was inserted into the AUX (In) Jack	Unplug the Audio Connection Cable from the AUX (In) Jack before use BT

5

GENERAL SPECIFICATIONS:

Power source: Built-in DC 3.7V, 450 mAh (1.665 WH) rechargeable Li-ion Battery, Recharge by DC 5V through the Micro USB Port

Impedance of the Earbuds:.....32Ω per Channel

Audio power:.....15 mW per Channel (Total 30mW)

BT Version:.....V4.1+EDR

BT Operation Distance:.....32 Feet in open area

PACKAGE INCLUDES:

- 1 x Owner's Manual
- 1 x USB Connection Cable (For Charging only)
- 1 x Audio Connection Cable with 3.5 mm plugs

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

6

LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental, b) Damaged through misuse, negligence, or abuse, c) Modified or repaired by anyone other than an authorized Craig Electronics Inc. service center, d) Damaged because it is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer, b) Damage to equipment not properly connected to the product, c) Any cost incurred in shipping the product for repair, d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc., and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:service@craigelectronics.com

Printed in China

MBH542_WC_MTGG1_B0US